MICRO DVD
WITH USB HOST

MM-DC10

THIS APPLIANCE IS MANUFACTURED BY:

SAMSUNG ELECTRONICS

Instruction Manual

Safety Warnings

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
PRODUCTO LASER CLASE 1

CAUTION
RISK OF ELECTRIC SHOCK.
DO NOT OPEN

CAUTION:
TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE REAR COVER. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CLASS 1 LASER PRODUCT

This Compact Disc player is classified as a CLASS 1 LASER product.

Use of controls, adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION-INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED, AVOID EXPOSURE TO BEAM.

This symbol indicates that dangerous voltage which can cause electric shock is present inside this unit.

This symbol alerts you to important operating and maintenance instructions accompanying the unit.

WARNING: To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

Wiring the Main Power Supply Plug(UK Only)

IMPORTANT NOTICE

The main lead on this equipment is supplied with a moulded plug incorporating a fuse. The value of the fuse is indicated on the pin face of the plug and if it requires replacing, a fuse approved to BS1362 of the same rating must be used.

Never use the plug with the fuse cover removed. If the cover is detachable and a replacement is required, it must be of the same colour as the fuse fitted in the plug. Replacement covers are available from your dealer.

If the fitted plug is not suitable for the power points in your house or the cable is not long enough to reach a power point, you should obtain a suitable safety approved extension lead or consult your dealer for assistance.

However, if there is no alternative to cutting off the plug, remove the fuse and then safely dispose of the plug. Do not connect the plug to a main socket as there is a risk of shock hazard from the bared flexible cord.

Never attempt to insert bare wires directly into a main socket. A plug and fuse must be used at all times.

IMPORTANT

The wires in the main lead are coloured in accordance with the following code:–

BLUE = NEUTRAL BROWN = LIVE

As these colours may not correspond to the coloured markings identifying the terminals in your plug, proceed as follows:–

The wire coloured BLUE must be connected to the terminal marked with the letter N or coloured BLUE or BLACK.

The wire coloured BROWN must be connected to the terminal marked with the letter L or coloured BROWN or RED.

WARNING: DO NOT CONNECT EITHER WIRE TO THE EARTH TERMINAL WHICH IS MARKED WITH THE LETTER E OR BY THE EARTH SYMBOL ⏚, OR COLOURED GREEN OR GREEN AND YELLOW.

Precautions

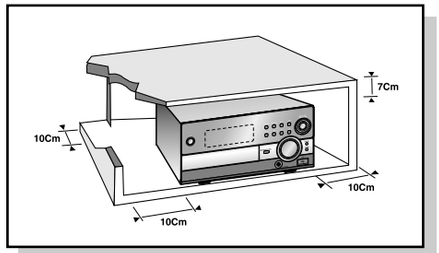

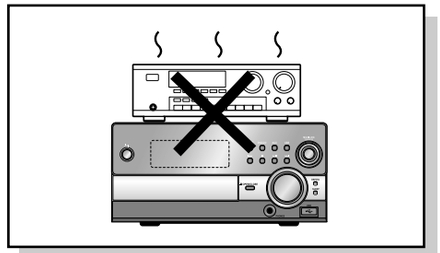

Ensure that the AC power supply in your house complies with the identification sticker located on the back of your player. Install your player horizontally, on a suitable base (furniture), with enough space around it for ventilation (3~4inches). Make sure the ventilation slots are not covered. Do not stack anything on top of the player. Do not place the player on amplifiers or other equipment which may become hot. Before moving the player, ensure the disc tray is empty. This player is designed for continuous use. Switching off the DVD player to the stand-by mode does not disconnect the electrical supply. In order to disconnect the player completely from the power supply, remove the main plug from the wall outlet, especially when left unused for a long period of time.

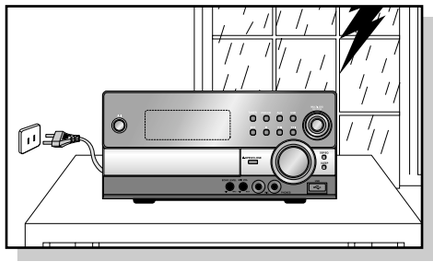

During thunderstorms, disconnect AC main plug from the wall outlet.
Voltage peaks due to lightning could damage the unit.

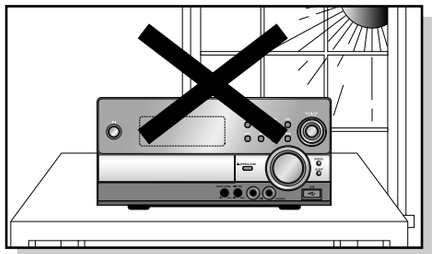

Do not expose the unit to direct sunlight or other heat sources.
This could lead to overheating and malfunction of the unit.

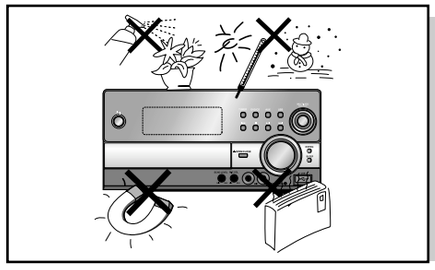

Protect the player from moisture(i.e. vases) , and excess heat(e.g.fireplace) or equipment creating strong magnetic or electric fields (i.e.speakers...). Disconnect the power cable from the AC supply if the player malfunctions. Your player is not intended for industrial use.

Use of this product is for personal use only.

Condensation may occur if your player or disc have been stored in cold temperatures.

If transporting the player during the winter, wait approximately 2 hours until the unit has reached room temperature before using.

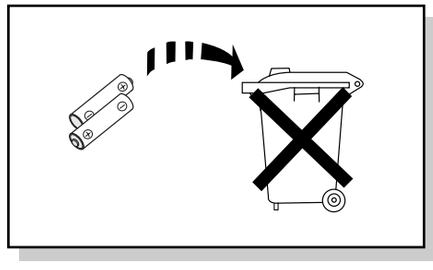

The battery used with this product contain chemicals that are harmful to the environment.

Do not dispose of batteries in the general household trash.

Notes on Discs

Multi-Disc Playback & AM/FM Tuner

The MM-DC10 combines the convenience of multi-disc playback capability, including DVD, VCD, CD, MP3-CD, DivX, CD-R, CD-RW, and DVD-RW, with a sophisticated AM/FM tuner all in a single player.

USB Host Play

You can enjoy the media files such as pictures, movies and tunes saved in an MP3 player, USB memory or digital camera in high visual and 2.1 channel sound by connecting the storage device to the USB port of the player.

TV Screen Saver Function

The MM-DC10 automatically brightens and darkens the brightness of the TV screen after 3 minutes in the stop. The MM-DC10 automatically switches itself into the power saving mode after 20 minutes in the screen saver mode.

Power Saving Function

The MM-DC10 automatically shuts itself off after 20 minutes in the stop .

Customized TV Screen Display

The MM-DC10 allows you to select your favorite image during JPEG, DVD playback and set it as your background wallpaper.

DVD (Digital Versatile Disc) offers fantastic audio and video, thanks to Dolby Digital surround sound and MPEG-2 video compression technology. Now you can enjoy these realistic effects in the home, as if you were in a movie theater or concert hall.

DVD players and the discs are coded by region. These regional codes must match in order for the disc to play. If the codes do not match, the disc will not play.
The Region Number for this player is given on the rear panel of the player.
(Your DVD player will only play DVDs that are labeled with identical region codes.)

Copy Protection

- **Many DVD discs are encoded with copy protection. Because of this, you should only connect your DVD player directly to your TV, not to a VCR. Connecting to a VCR results in a distorted picture from copy-protected DVD discs.**
- This product incorporates copyright protection technology that is protected by methods claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Contents

PREPARATION
Safety Warnings 1
Precautions 2
Notes on Discs 3
Description 5

CONNECTIONS
Connecting the Speakers 9
Connecting to a TV 10
P.SCAN(Progressive Scan) Function 12
Connecting to External Components 13
Connecting the FM, AM Antennas 14

OPERATION
DEMO / DIMMER Function 15
Disc Playback 17
MP3-CD Playback 18
JPEG File Playback 19
DivX Playback 21
Playing Media Files using the USB HOST feature 23
Displaying Disc Information 25
Checking the Remaining Time 25
Fast/Slow Playback 26
Skipping Scenes/Songs 26
Repeat Playback 27
A-B Repeat Playback 28
Step Function 29
Angle Function 29
Zoom (Screen Enlarge) Function 30
EZ VIEW Function 30
Selecting Audio/Subtitle Language 31
Moving Directly to a Scene/Song 32
Using Disc Menu 33
Using the Title Menu 34

SETUP
Setting the Language 35
Setting TV Screen type 37
Setting Parental Controls (Rating Level) 39
Setting the Password 40
Setting the Wallpaper 41
Setting the DRC (Dynamic Range Compression) 43
AV SYNC Setup 44
Sound Field (DSP)/EQ Function 45
Setting the Clock 46
Timer Function 47

RADIO OPERATION
Listening to Radio 49
Presetting Stations 50
About RDS broadcasting 51

MISCELLANEOUS
Canceling the Timer 53
Convenient Functions 54
Connecting Headphones 55
Cautions on Handling and Storing Discs 56
Before Calling for Service 57
Notes on Discs 59
Language Code List 60
USB Host Feature Supported Family 61
Specifications 63
Memo 64

Description

—Front Panel—

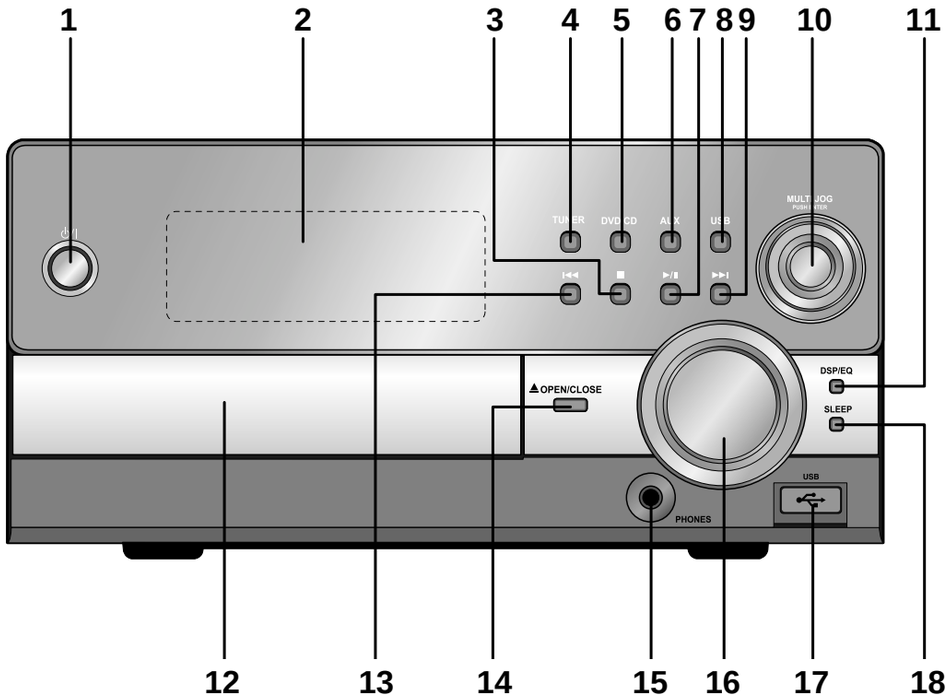

1. POWER (⏻/I) BUTTON
2. WINDOW DISPLAY
3. STOP (■) BUTTON
4. TUNER BUTTON
5. DVD/CD BUTTON
6. AUX BUTTON
7. PLAY/PAUSE (▶/II) BUTTON
8. USB BUTTON
9. TUNING UP & SKIP (▶▶I) BUTTONS
10. MULTI JOG
11. DSP/EQ BUTTON
12. CD DOOR
13. TUNING DOWN & SKIP (I◀◀) BUTTONS
14. OPEN/CLOSE BUTTON
15. HEADPHONE JACK
16. VOLUME CONTROL
17. USB CONNECTOR
18. SLEEP BUTTON

—Rear Panel—

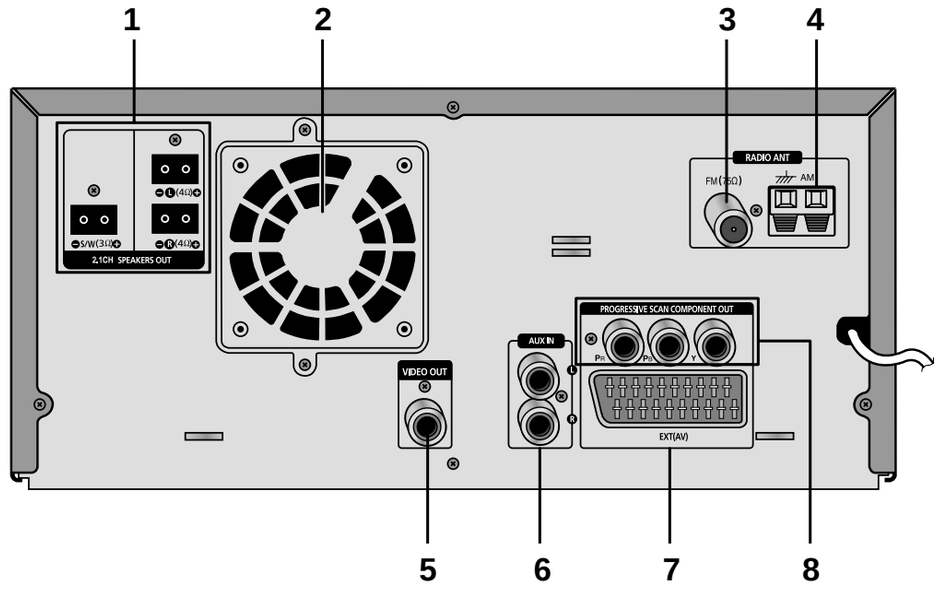

1. **2.1 Channel Speaker Output Terminals**
2. **Cooling Fan**
3. **AM Antenna Connectors**
4. **FM Antenna Connector**
5. **Video Output Connector**
   Connect the TV's video input jacks (VIDEO IN) to the VIDEO OUT connector.
6. **AUX-Input**
7. **Scart Connector**
   Connect to a TV with scart input connector.
8. **COMPONENT VIDEO OUTPUT jacks**
   Connect a TV with component video inputs to these jacks.

Accessories

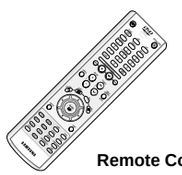

Remote Control

Video Cable

FM Antenna

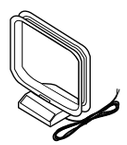

AM Antenna

User's Manual

Description

—Remote Control—

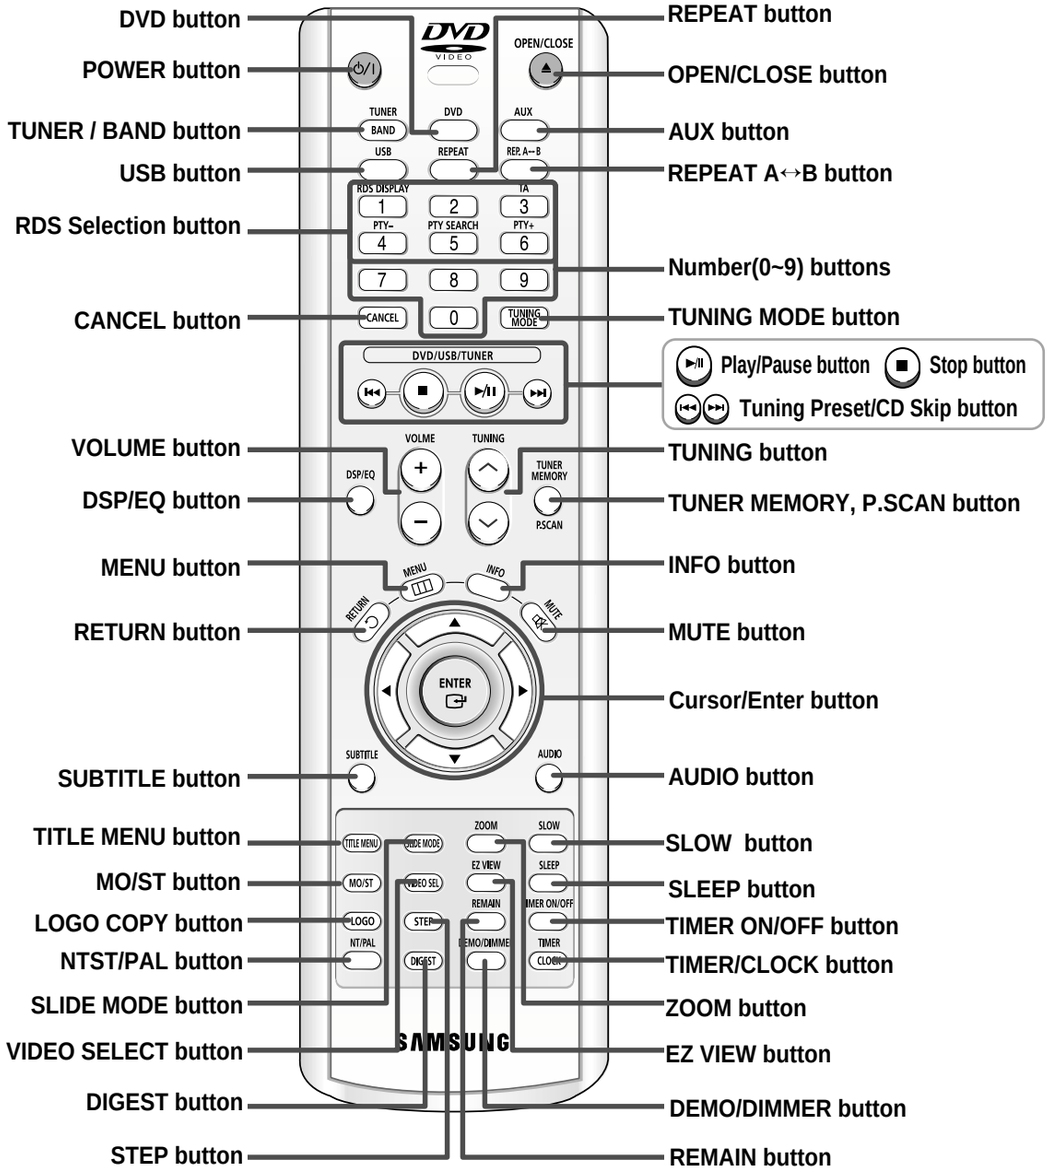

Insert Remote Batteries

1 Remove the battery cover on the back of the remote by pressing down and sliding the cover in the direction of the arrow.

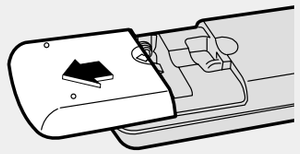

2 Insert two 1.5V AAA batteries, paying attention to the correct polarities (+ and –).

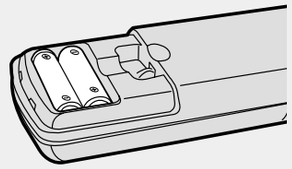

3 Replace the battery cover.

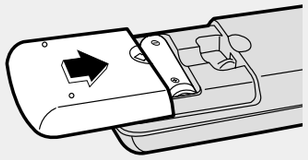

Caution **Follow these precautions to avoid leaking or cracking cells:**

- Place batteries in the remote control so they match the polarity:(+) to (+)and (–)to (–).
- Use the correct type of batteries.Batteries that look similar may differ in voltage.
- Always replace both batteries at the same time.
- Do not expose batteries to heat or flame.

Range of Operation of the Remote Control

The remote control can be used up to approximately 23 feet/7 meters in a straight line. It can also be operated at a horizontal angle of up to 30° from the remote control sensor.

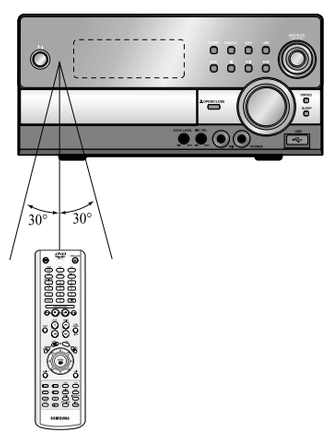

Connecting the Speakers

Before moving or installing the product, be sure to turn off the power and disconnect the power cord.

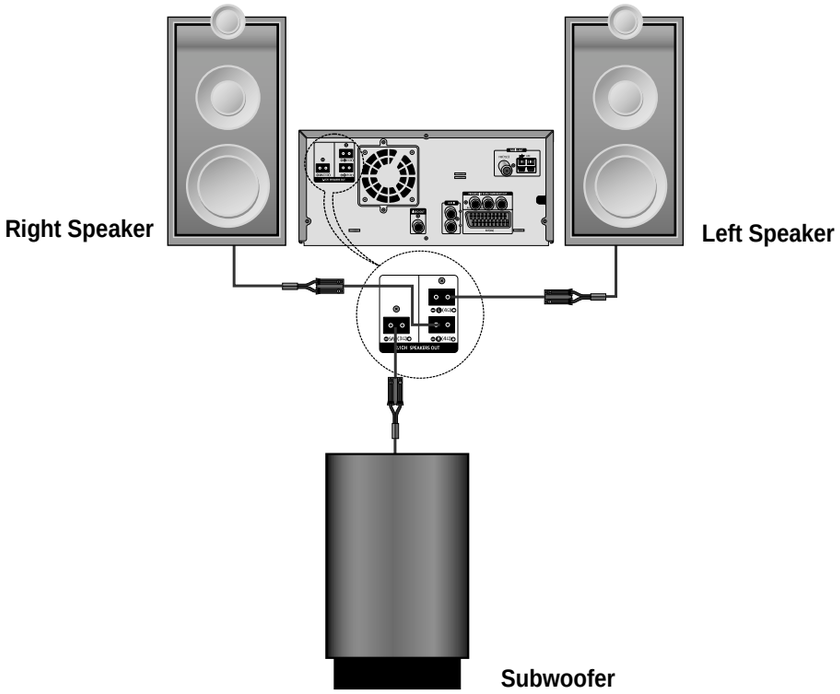

Position of the DVD Player

- Place it on a stand or cabinet shelf, or under the TV stand.

Loudspeakers (L R)

- Place these speakers in front of your listening position, facing inwards (about 45°) toward you.
- Place the speakers so that their tweeters will be at the same height as your ear.
- Align the front face of the front speakers with the front face of the center speaker or place them slightly in front of the center speakers.

Selecting the Listening Position

The listening position should be located about 2.5 to 3 times the distance of the TV's screen size away from the TV. Example: For 32" TVs 2~2.4m (6~8feet)
For 55" TVs 3.5~4m (11~13feet)

Subwoofer (SW)

- The position of the subwoofer is not so critical. Place it anywhere you like.

Directions in Installing Speaker

- Installation in a place near heating apparatus, under direct lay of light or with high humidity may cause performance degradation of the speaker.
- Do not install on the wall or on a high place of pole or other unstable place to prevent any safety accident caused by falling of the speaker.
- Do not take the speaker apart from TV or computer monitor.
  The speaker near the TV or computer monitor may influence the quality of the screen display.

Connecting to a TV

Please be sure to turn off the power and unplug the power cord before moving or installing this unit.
Please choose one of three video connection methods.

Method 1 **Composite Video** (supplied)····· **Good Quality**

1 Connect Video Out on the player to Video In on your TV.

2 Press the TV/VIDEO button on the remote of TV control to set the TV to "VIDEO".

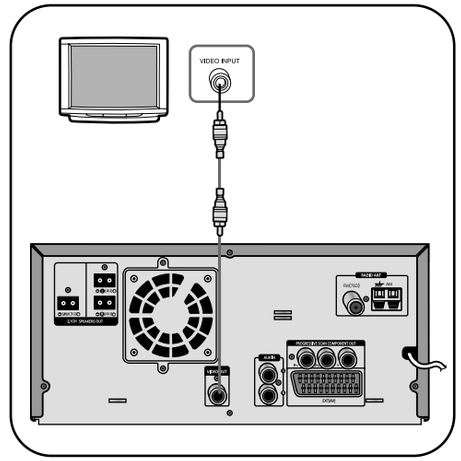

Method 2 **Scart** (not supplied) ····· **Better Quality**

If you television is equipped with an SCART input, connect an Scart Jack (not supplied) from the AV OUT jack on the back panel of the system to the SCART IN jack on your television.

VIDEO SELECT Function

Press the VIDEO SEL. button.

- "**COMPOSITE**" or "**RGB**" will appear in the display. At this time, press the **VIDEO SEL.** button shortly to select between "**COMPOSITE**" and "**RGB**".
- If Scart (RGB Input) is equipped for your TV, press VIDEO SEL. button to select RGB mode.
  You can get a better picture quality by using Scart setting.
- If Scart (RGB Input) is not equipped for your TV, press VIDEO SEL. button to select COMPOSITE mode.

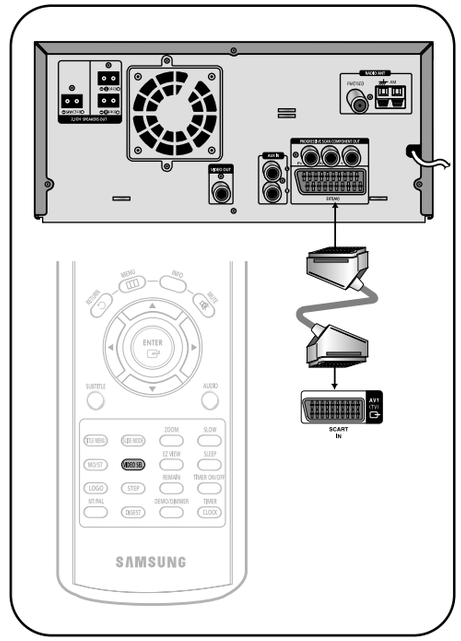

Connecting to a TV (Con't)

Method 3 **Component Video** (not supplied) ..... **Best Quality**

Use this method if your TV have Pr, Pb and Y jacks.

If you television is equipped with Component Video inputs,connect a component video cable (not supplied) from the Pr, Pb and Y jacks on the back panel of the system to the corresponding jacks on your television.

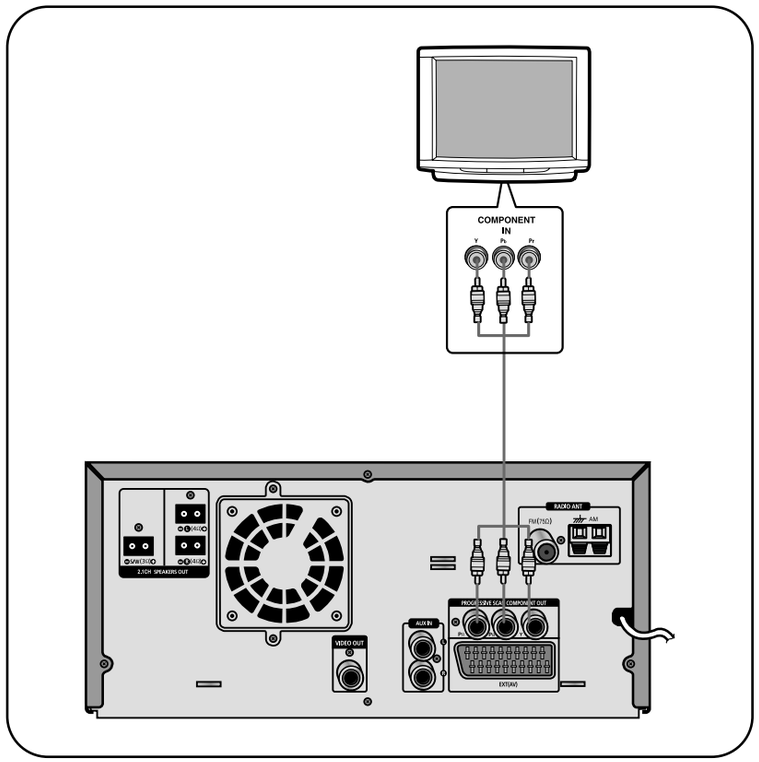

Note • Component video is output only when P.SCAN function is selected.

P.SCAN(Progressive Scan) Function

Unlike regular Interlace Scan, in which two fields of picture information alternate to create the entire picture (odd scan lines, then even scan lines), Progressive Scan uses one field of information (all lines displayed in one pass) to create a clear and detailed picture without visible scan lines.

1 **Press STOP button.**

- When disc is played back, press the **STOP** button twice so that "**STOP**", appears on the display.

2 **Press and hold P.SCAN button on the remote control for over 5 seconds.**

- Pressing and holding the button for over 5 seconds will select "**Progressive Scan**" and "**Interlace Scan**" alternately.
- When you select P.SCAN, "**P.SCAN**" will appear on the display.
- To set P.Scan mode for DivX discs, press the **P.SCAN** button on the remote control for more than 5 seconds with no disc in the unit ("**NO DISC**" on the display), then load the DivX disc and play.

What is Progressive (or Non-Interlaced) Scanning?

Interlaced Scan (1 FRAME = 2 FIELDS)	Progressive Scan (FULL FRAME)
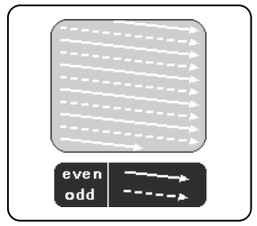	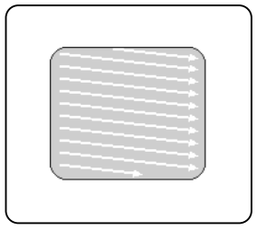
In interlaced-scan video, a frame consists of two interlaced fields (odd and even), where each field contains every other horizontal line in the frame. The odd field of alternating lines is displayed first, and then the even field is displayed to fill in the alternating gaps left by the odd field to form a single frame. One frame, displayed every 1/30th of a second, contains two interfaced fields, thus a total of 60 fields are displayed every 1/60th of a second. The interlaced scanning method is intended for capturing a still object.	The progressive scanning method scans one full frame of video consecutively down the screen, line by line. An entire image is drawn at one time, as opposed to the interlaced scanning process by which a video image is drawn in a series of passes. The progressive scanning method is desirable for dealing with moving objects.

Note

- This function works only on TVs equipped with component video inputs (Y, Pr, Pb) that support Progressive Video. (It does not work on TVs with conventional component inputs, i.e., non-progressive scan TVs.)
- Depending on the brand and model of your TV, this function may not work.

Connecting to External Components

Connecting to an External Analog Component

Example: Analog signal components such as a VCR, Camcorder, and TV.

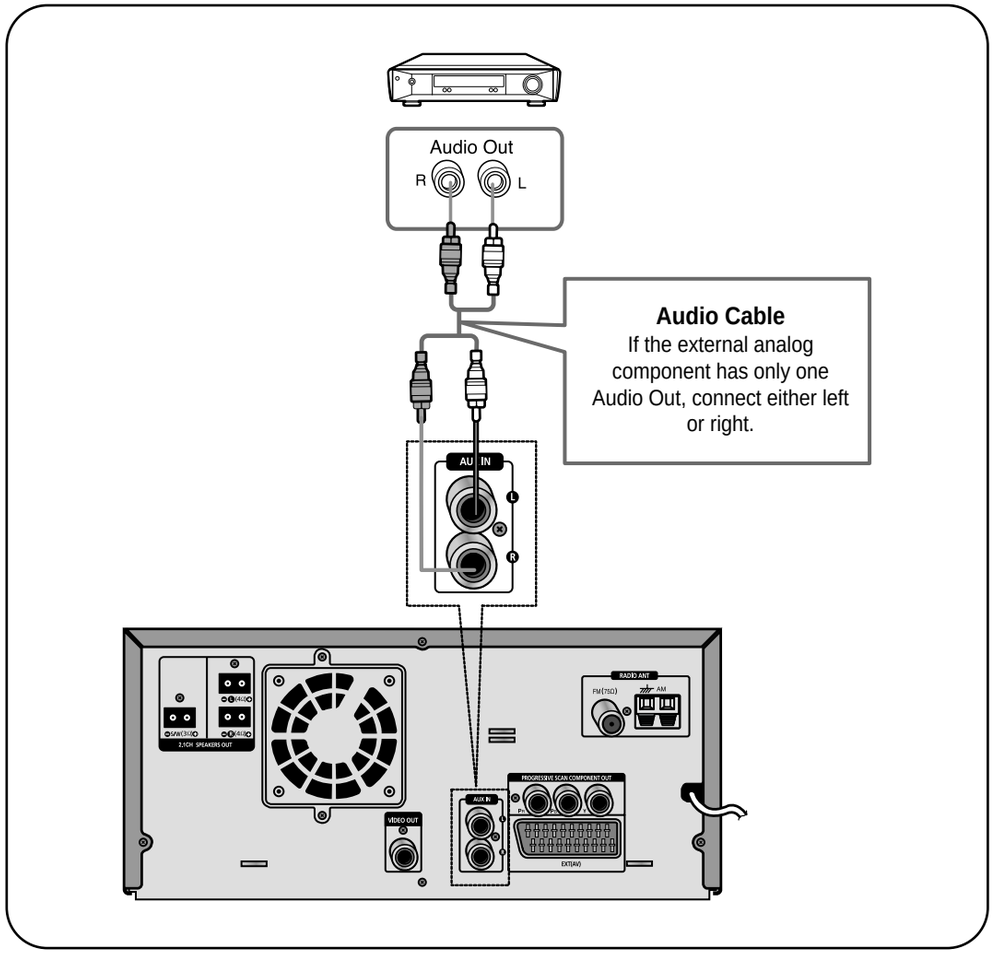

1 Connect Audio In on the DVD player to Audio Out on the external analog component.

- Be sure to match connector colors.

2 Press **AUX** to select AUX.

- '**AUX**' appears in the display.

Connecting the FM, AM Antennas

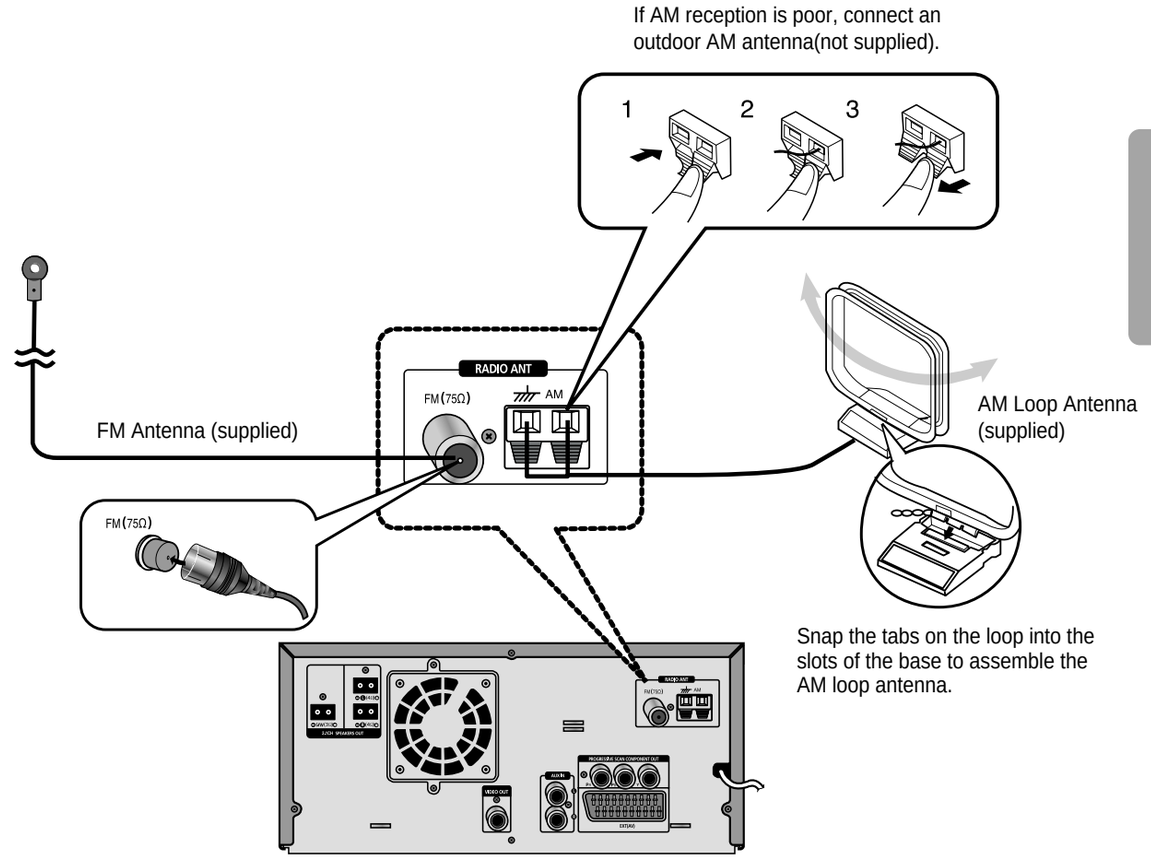
If AM reception is poor, connect an outdoor AM antenna(not supplied).
1
2
3
RADIO ANT
FM(75Ω)
AM
FM Antenna (supplied)
AM Loop Antenna (supplied)
Snap the tabs on the loop into the slots of the base to assemble the AM loop antenna.

FM antenna connection

1. **Connect the FM antenna supplied to the FM 75Ω COAXIAL terminal.**
2. **Slowly move the antenna wire around until you find a location where reception is good, then fasten it to a wall or other rigid surface.**

AM antenna connection

1. **Connect the AM loop antenna supplied to the AM and ⏚ terminals.**
2. **If reception is poor, connect an outdoor single vinyl-covered wire to the AM terminal. (Keep the AM loop antenna connected).**

DEMO / DIMMER Function

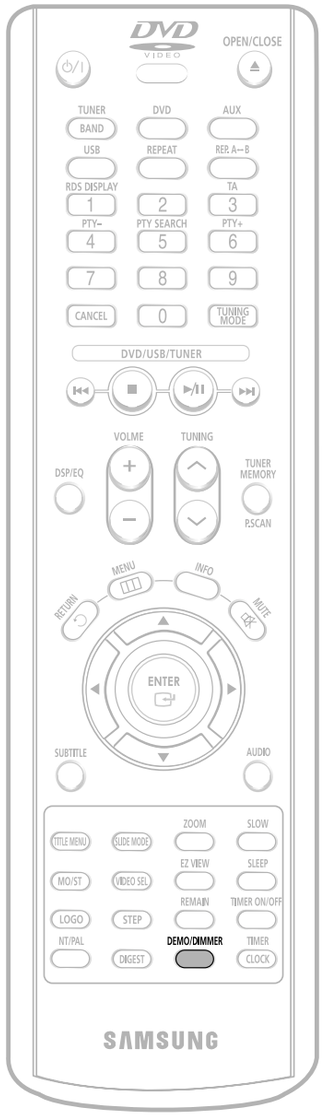

DEMO Function

You can view the various functions available on your system.

Press and hold **DEMO/DIMMER** button.

- The various functions available are listed in turn on the display.
- All these functions are described in detail in this booklet.
  For instructions on how to use them, refer to the appropriate sections.

To cancel this function, press **DEMO/DIMMER** again.

DIMMER Function

You can adjust the brightness of the display on the main unit.

Press **DEMO/DIMMER** button.

- Each time the button is press, the brightness changes as follows: **DIMMER ON(Dim) → DIMMER OFF(Bright)**.

Disc terminology

Titles and chapters (DVD-VIDEO)

- DVD-video is divided into several large sections called "titles" and smaller sections called "chapters". Numbers are allotted to these sections.
  These numbers are called "title numbers" and "chapter numbers".

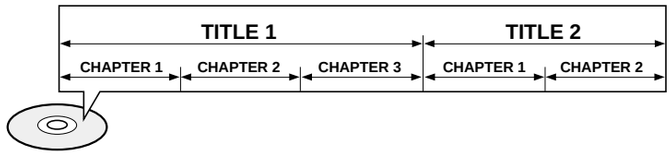

Tracks (Video and music CDs)

- Video and music CDs are divided into sections called "tracks".
  Numbers are allotted to these sections. These numbers are called "track numbers".

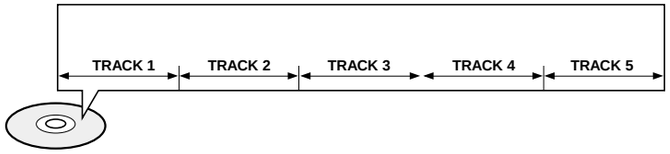

Files (DivX)

- DivX is divided into sections called "files".
  Numbers are allotted to these sections. These numbers are called "file numbers".

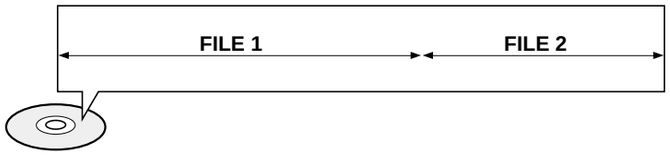

Note

- **In this manual, the instructions marked with "DVD (DVD)" are applicable to DVD-VIDEO, and DVD-R/RW discs.**
  Where a particular DVD type is mentioned, it is indicated separately.
- Depending on the content of the disc, the initial screen may appear different.

Disc Playback

1 Press **OPEN/CLOSE** button to open the disc tray.

2 Load a disc.

- Place a disc gently into the tray with the disc's label facing up.

3 Press **OPEN/CLOSE** button to close the disc tray.

DVD VCD CD

- Playback starts automatically.

Note

- Depending on the content of the disc, the initial screen may appear different.

To stop playback, press **STOP** during playback.

- If pressed once, "**PRESS PLAY**" is displayed and the stop position will be stored in memory.
  If **PLAY/PAUSE** (▶/II) button or **ENTER** button is pressed, playback resumes from the stop position.
  (This function works only with DVDs.)
- If pressed twice, "**STOP**" is displayed, and if **PLAY/PAUSE** (▶/II) button is pressed, playback starts from the beginning.

To temporarily pause playback, press **PLAY/PAUSE** during playback.

- To resume playback, press **PLAY/PAUSE** (▶/II) button again.

Selecting the Video Format

Press and hold **NT/PAL** button on the remote controller for over 5 seconds while the power is turned off.

- By default, the video format is set to "PAL".
- "**NTSC**" or "**PAL**" will appear in the display.
  At this time, press the **NT/PAL** button shortly to select between "**NTSC**" and "**PAL**".
- Each country has a different video format standard.
- For normal playback, the video format of the disc must be the same as the video format of your TV.

MP3-CD Playback

Data CDs (CD-ROM, CD-R, CD-RW) encoded in MP3 format can be played.

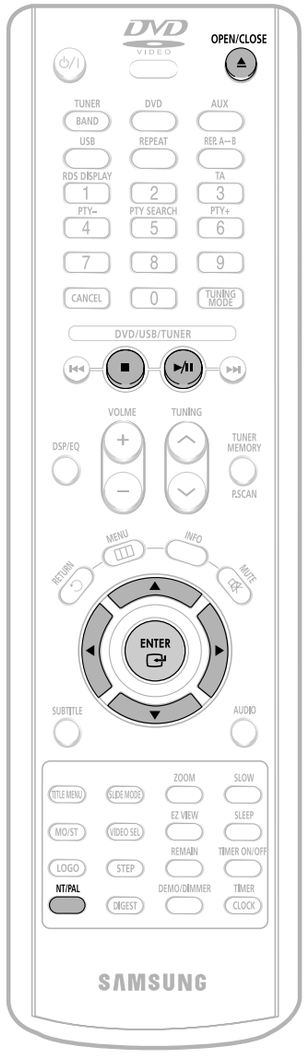

1 Press the **OPEN/CLOSE** button to open the disc tray, and then load the MP3 disc.

- The MP3 menu screen will appear and playback will start.
- The appearance of the menu depends on the MP3 disc.
- WMA-DRM files cannot be played.

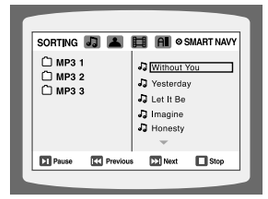

2 In Stop mode, use ◀ ▶ ▲ ▼ to select the album, and then press the **ENTER** button.

- User ▲▼ to select the track.

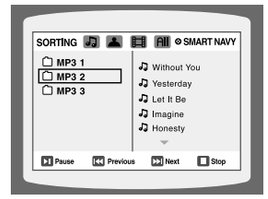

3 To change the album, use ◀ ▶ ▲ ▼ to select another album in Stop mode, and then press the **ENTER** button.

- To select another album and track, repeat Steps 2 and 3 above.

4 Press the **STOP** button to stop playback.

Note

- Depending on the recording mode, some MP3-CDs may not play.
- Table of contents of a MP3-CD varies depending on the MP3 track format recorded on the disc.

To play a file icon in the screen

Press the ◀ ▶ ▲ ▼ button when it is in stop status and select a desired icon from the top part of the menu.

- To play music files only, select the Icon.
- To view image files only, select the Icon.
- To view movie files only, select the Icon.
- To select all files select the Icon.

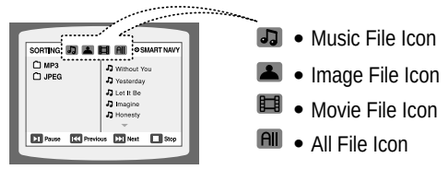

- Music File Icon
- Image File Icon
- Movie File Icon
- All File Icon

JPEG File Playback JPEG

Images captured with a digital camera or camcorder, or JPEG files on a PC can be stored on a CD and then played back with this DVD player.

Slide Mode

1 Place the JPEG disc on the disc tray.

2 Press the **OPEN/CLOSE** button.

3 Press **SLIDE MODE** button.

- Playback starts automatically.
- Each time the button is pressed, the image makes the transition as follows:

SLIDE SHOW MODE : 1	From top to bottom
SLIDE SHOW MODE : 2	From bottom to top
SLIDE SHOW MODE : 10	Rectangular shape in the center
SLIDE SHOW MODE : 11	Vertical blinds effect
SLIDE SHOW MODE : RAND	Each time a new image is displayed, slide modes (1~11) will be applied randomly and automatically.
SLIDE SHOW MODE : NONE	Cancels the slide mode.

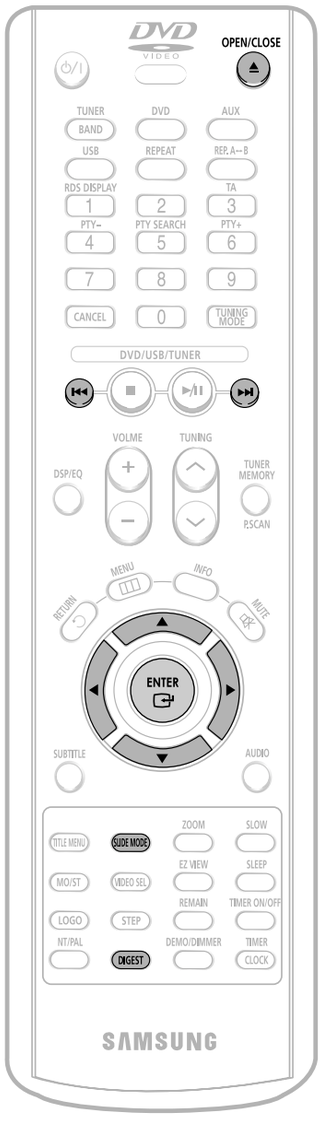

Press ⏮, ⏭ to skip to the next slide.

- Each time the button is pressed, the slide moves backward or forward.

Digest Function

You can view 9 JPEG images on the TV screen.

1 Press **DIGEST** button during playback.

- JPEG files will be shown in 9 windows.

2 Press Cursor ▲, ▼, ◀, ▶ buttons to select the desired image and then press **ENTER** button.

- The selected image is played for 5 seconds before moving to the next image.

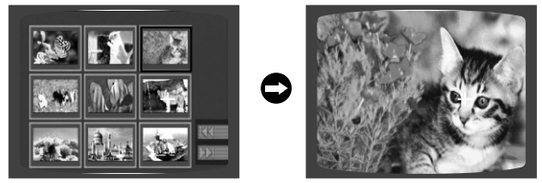

To view the previous or next image with 9 windows, press ⏮, ⏭.

Rotate/Flip Function

Press Cursor ▲, ▼, ◀, ▶ buttons during playback.

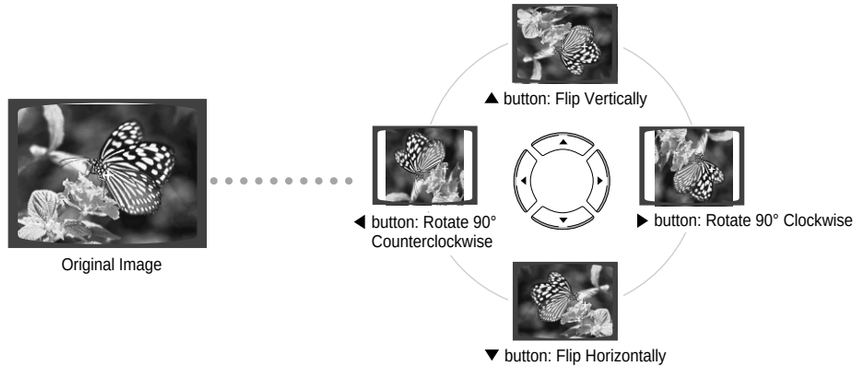
▲ button: Flip Vertically
◀ button: Rotate 90° Counterclockwise
▶ button: Rotate 90° Clockwise
▼ button: Flip Horizontally
Original Image

JPEG limitation

The maximum resolution is 5120 x 3840 (or 19.0 MPixel) for baseline images, and 2048 x 1536 (3.0 MPixel) for progressive images.
There is no filesize limitation.
The decoder is device independent, thus above applies to USB and other devices as well.

☞ Progressive JPEG images — those that appear gradually as the image is being downloaded.

DivX Playback

Skip Forward/Back

During playback, press the ⏮, ⏭ button.

- Goes to the next file whenever you press ⏭ button, if there are over 2 files in the disk.
- Goes to the previous file whenever you press ⏮ button, if there are over 2 files in the disk.

Fast playback

To play back the disc at a faster speed, press and hold ⏮ or ⏭ during playback.

- Each time you press and hold either button, the playback speed will change as follows:
  2x ➞ 4x ➞ 8x ➞ 32x ➞ Normal.

5 Minute Skip function

During playback, press the ◀, ▶ button.

- Playback skips 5 minutes forward whenever you press ▶ button.
- Playback skips 5 minutes back whenever you press ◀ button.

Zoom Function

1 Press **ZOOM** button.

- Each time you press the button, your selection will toggle between "**ZOOM X2**" and "**ZOOM OFF**".

2 Press Cursor ▲, ▼, ◀, ▶ buttons to move to the area you want to enlarge.

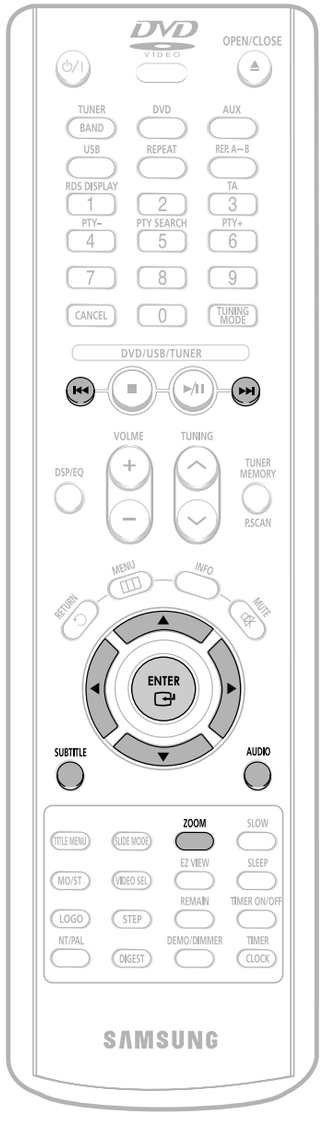

Note

- DIVX file can be zoomed only in ZOOM X2 mode.
- Zoom function is not available when playing a MPEG1 video file.

Subtitle Display

Press the **SUBTITLE** button.

- Each time you press the button, your selection will toggle between "**SUBTITLE ON**" (1/1, 1/2 ...) and "**SUBTITLE OFF**".
- If the disc has only one subtitle file, it will be played automatically.

Audio Display

Press the **AUDIO** button.

- Each time you press the button, your selection will toggle between "**AUDIO ON**" (1/1, 1/2 ...) and " ".

Note

- " " is displayed when there is one supported language in the disc.

DivX(Digital internet video eXpress)

DivX is a video file format developed by Microsoft and is based on MPEG4 compression technology to provide audio and video data over the Internet in real-time.
MPEG4 is used for video encoding and MP3 for audio encoding so that the users can watch a movie at near DVD-quality video and audio.

1. Supported Formats

- This product only provides the following media formats. If both video and audio formats are not supported, the user may experience problems such as broken images or no sound.

• Supported Video Formats

Format	AVI	WMV
Supported Versions	DivX3.11 ~ 5.1	V1/V2/V3/V7

• Supported Audio Formats

Format	MP3	WMA	AC3	DTS
Bit Rate	80~384kbps	56~128kbps	128~384kbps	1.5Mbps
Sampling Frequency	44.1khz		44.1/48khz	44.1khz

- DivX files, including audio and video files, created in the DTS format can only support up to 6Mbps.
- Aspect Ratio: Although default DivX resolution is 640*480 pixels (4:3), this product supports up to 720*480 pixels (16:9). TV screen resolutions higher than 800 will not be supported.
- When you play a disc whose sampling frequency is higher than 48khz or 320kbps, you may experience shaking on the screen during playback.

2. Caption Function

- You must have some experience with video extraction and editing in order to use this feature properly.
- To use the caption function, save the caption file (*.smi) in the same file name as that of the DivX media file (*.avi) within the same folder.
  Example. Root Samsung_Bluetek_007CD1.avi
  Samsung_Bluetek_007CD1.smi
- Up to 60 alphanumeric characters or 30 East Asian characters (2 byte characters such as Korean and Chinese) for the file name.

Playing Media Files using the USB HOST feature

You can enjoy the media files such as pictures, movies and tunes saved in an MP3 player, USB memory or digital camera in high visual and 2.1 channel sound by connecting the storage device to the USB port of the player.

1 Connect the USB device to the USB port on the reside of the unit.

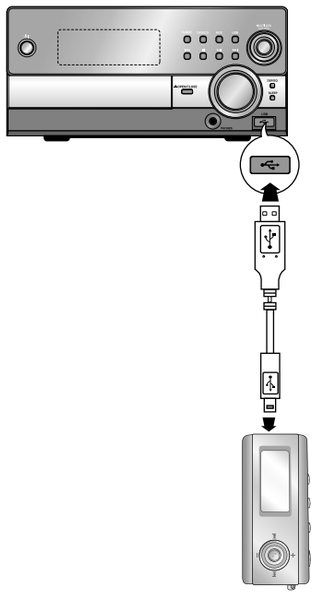

2 Press the **USB** button on the main unit or the **USB** button on the remote control to select the USB mode.

- "**USB**" appears on the display screen and then disappear.
- USB SORTING screen appears on the TV screen and the saved file is played.

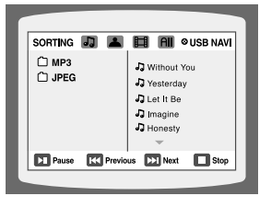

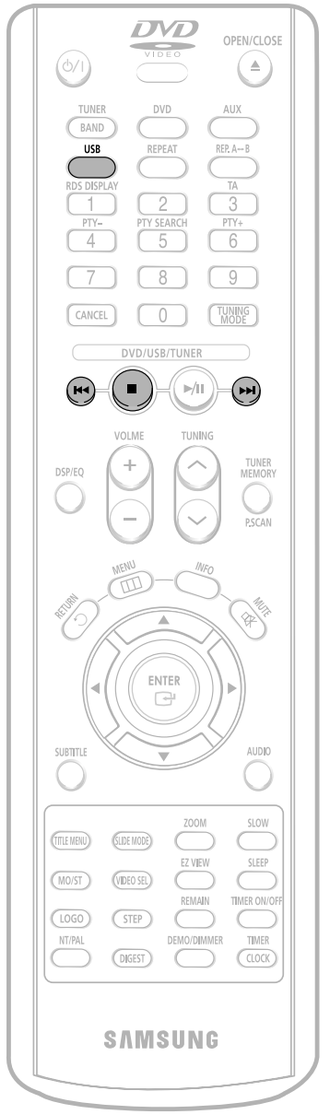

To stop playback, press the **STOP** (■) button.

Safe USB Removal

To prevent damage to the memory stored in the USB device, perform safe removal before disconnecting the USB cable.

(1) Press the stop button twice in a row.
The display will show **REMOVE → USB**.

(2) When the main unit is powered off, or in a different function mode, remove the USB cable.

Skip Forward/Back

During playback, press the ⏮ ⏭ button.

- When there is more than a file, when you press the ⏭ button, the next file is selected.
- When there is more than a file, when you press the ⏮ button, the previous file is selected.

Fast playback

To play back the disc at a faster speed, press and hold ⏮ or ⏭ during playback.

- Each time you press and hold either button, the playback speed will change as follows:
  2x → 4x → 8x → 32x → Normal.

Compatible Devices

1. USB devices that support USB Mass Storage v1.0.
   (USB devices that operate as a removable disk in Windows (2000 or later) without additional driver installation.)
2. MP3 Player: HDD and flash type MP3 player.
3. CBI (Control/Bulk/Interrupt) is not supported.
4. Digital camera: PTP protocol is not supported.
   - Devices which require additional program installation when you have connected it to a computer, are not supported.
5. USB HDD and USB Flash Drive: Devices that support USB2.0 or USB1.1.
   - You may experience a difference in playback quality when you connect a USB1.1 device.
   - For a USB HDD, make sure to connect an auxiliary power cord to the USB HDD for proper operation.
6. USB card Reader: One slot USB card reader and Multi slot USB card reader
   - Depending on the manufacturer. the USB card reader may not be supported.
   - If you install multiple memory devices into a multi card reader, you may experience problems.
7. If you use a USB extension cable, the USB device might not be recognized.

- **Supported Formats**

	File name	File extension	Bit rate	Version	Pixel	Sampling Frequency
Still Picture	JPG	JPG .JPEG	–	–	640*480	–
Music	MP3	.MP3	80~384kbps	–	–	44.1kHz
	WMA	.WMA	56~128kbps	V8	–	44.1kHz
Movie	VCD	MPG.MPEG .DAT	1.5Mbps	VCD1.1,VCD2.0	320*480	44.1KHz
	WMV	.WMV	4Mbps	V1,V2,V3,V7	720*480	44.1KHz~48KHz
	DivX	.AVI,.ASF	4Mbps	DivX3.11~DivX5.1,Xvid	720*480	44.1KHz~48KHz

- A device using NTFS file system is not supported.
  (Only FAT file system is supported.)
- **The USB host function of this product does not support all USB devices. For the information on the supported devices, see page 61~62.**

Displaying Disc Information

You can view playback information on the disc on the TV screen.

Press **INFO** button.

- Each time the button is pressed, the display changes as follows:

DVD

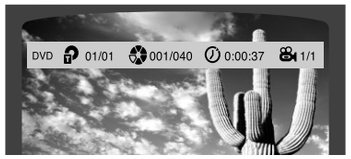

Display disappears

VCD CD

Display disappears

MP3 DivX JPEG

Display disappears

- **What is a Title?**
  A movie contained in a DVD disc.
- **What is a Chapter?**
  Each title on a DVD disc is divided into several smaller sections called "chapters".
- **appears on the TV screen!**
  If this symbol appears on the TV screen while buttons are being operated, that operation is not possible with the disc currently being played.
- **What is a Track (File)?**
  A section of video or a music file recorded on a VCD, CD, or MP3-CD.

Note

- Depending on the disc, the disc information display may appear different.
- Depending on the disc, you can also select DOLBY DIGITAL, or PRO LOGIC.

Screen Display

DVD	DVD display	MP3	MP3 CD display		TRACK (FILE) display		AUDIO LANGUAGE display
VCD	VCD display	DivX	DivX display		TITLE display		ELAPSED TIME display
CD	CD display		CHAPTER display		REPEAT PLAYBACK display	LR	STEREO (L/R) display

DOLBY DIGITAL	DOLBY DIGITAL display
	SUBTITLE display
	ANGLE display

Checking the Remaining Time

Press the REMAIN button.

- For checking the total and remaining time of a title or chapter being played.

Each time the REMAIN button is pressed

DVD: TITLE ELAPSED → TITLE REMAIN → CHAPTER ELAPSED → CHAPTER REMAIN

VCD / CD: TRACK ELAPSED → TRACK REMAIN → TOTAL ELAPSED → TOTAL REMAIN

Fast/Slow Playback

Fast Playback

DVD VCD CD MP3

Press and hold ⏮◀◀ ▶▶⏭.

- Each time the button is held down during playback, the playback speed changes as follows:

◀◀ 2X → 4X → 8X → 32X → ▶ PLAY

▶▶ 2X → 4X → 8X → 32X → ▶ PLAY

Slow Playback

Press **SLOW** button.

- Each time the button is pressed during playback, the playback speed changes as follows:

DVD: 1/2 → 1/4 → 1/8 → ◀I 1/2 → ◀I 1/4 → ◀I 1/8 → ▶ PLAY

VCD: 1/2 → 1/4 → 1/6 → ▶ PLAY

DivX: 1/2 → 1/4 → 1/8 → ▶ PLAY

Note

- Reverse slow playback does not work with VCD and DivX.

Skipping Scenes/Songs

Briefly press ⏮◀◀ ▶▶⏭.

- Each time the button is pressed briefly during playback, the previous or next chapter, track, or directory (file) will be played.
- You cannot skip chapters consecutively.

DVD

VCD

- When watching a VCD with a track longer than 15 minutes, each time ⏮◀◀ ▶▶⏭ is pressed, playback will skip back or forward 5 minutes.

MP3

Repeat Playback

Repeat playback allows you to repeatedly play a chapter, title, track (song), or directory (MP3 file).

DVD VCD CD MP3 JPEG

Press **REPEAT** button.

- Each time the button is pressed during playback, the repeat playback mode changes as follows:

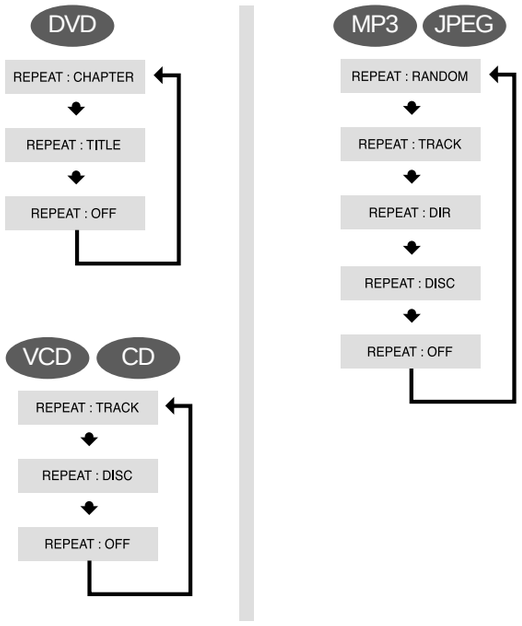

Repeat Playback Options

CHAPTER
Repeatedly plays the selected chapter.

TITLE
Repeatedly plays the selected title.

RANDOM
Plays tracks in random order.
(A track that has already been played may be played again.)

TRACK
Repeatedly plays the selected track.

DIR
Repeatedly plays all tracks in the selected folder.

DISC
Repeatedly plays the entire disc.

OFF
Cancels Repeat Playback.

Note

- Repeat playback operation is not possible with version 2.0 VCD discs if PBC is turned on. To use Repeat Playback on a VCD with PBC, you should set the PBC to OFF in the disc menu. (See page 33.)

To Select a Repeat Playback Mode in the Disc Information Screen

1 Press **INFO** button twice.

2 Press Cursor ▶ button to move to REPEAT PLAYBACK (↻) display.

3 Press Cursor ▼ button to select the desired Repeat Playback mode.

4 Press **ENTER** button.

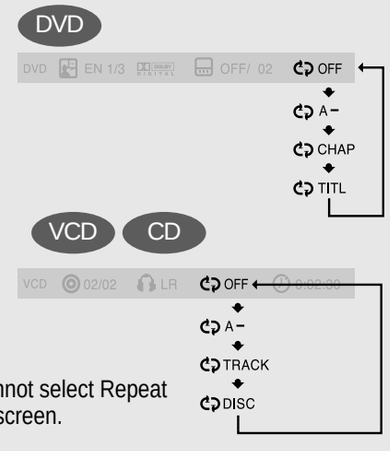

* For MP3 and JPEG discs, you cannot select Repeat Play from the information display screen.

A-B Repeat Playback

You can repetitively play back a designated section of a DVD.

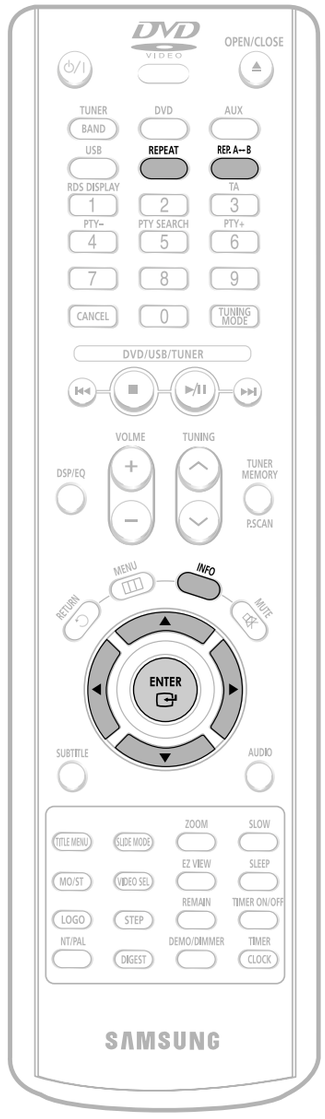

DVD VCD

1 Press **REP. A↔B** at the beginning of the section you want to repeat.

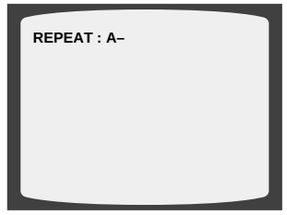

2 Press **REP. A↔B** at the end of the section.

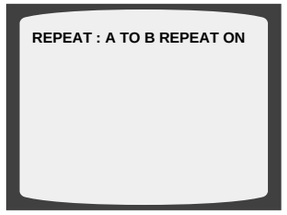

To cancel A↔B Repeat Playback, press **REP. A↔B** to select "**REPEAT OFF**".

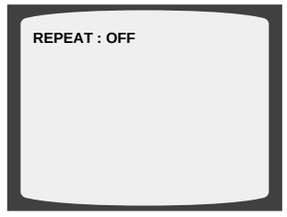

Note

- A↔B Repeat Playback does not work on CD, MP3 and JPEG discs.
- To select A↔B Repeat Playback from the information display screen, press **REP. A↔B**.

Step Function DVD VCD

Press **STEP** button.

- The picture moves forward one frame each time the button is pressed during playback.

Note

- During fast playback of a CD or MP3-CD, sound is heard only at 2x speed, and not at 4x, 8x, and 32x speeds.
- No sound is heard during slow playback and step motion playback.

Angle Function DVD

This function allows you to view the same scene in different angles.

1 Press **INFO** button.

2 Press Cursor ▶ button to move to ANGLE ( ) display.

3 Press Cursor ▲, ▼ or numeric buttons to select the desired angle.

- Each time the button is pressed, the angle changes as follows:

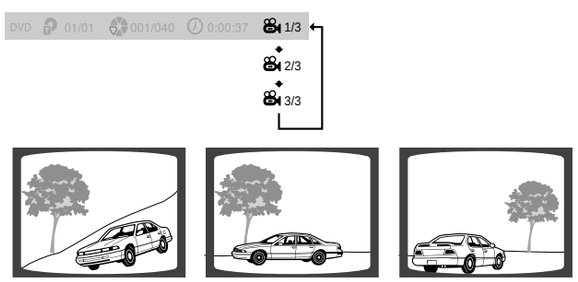

Note

- The Angle function works only with discs on which multiple angles have been recorded.

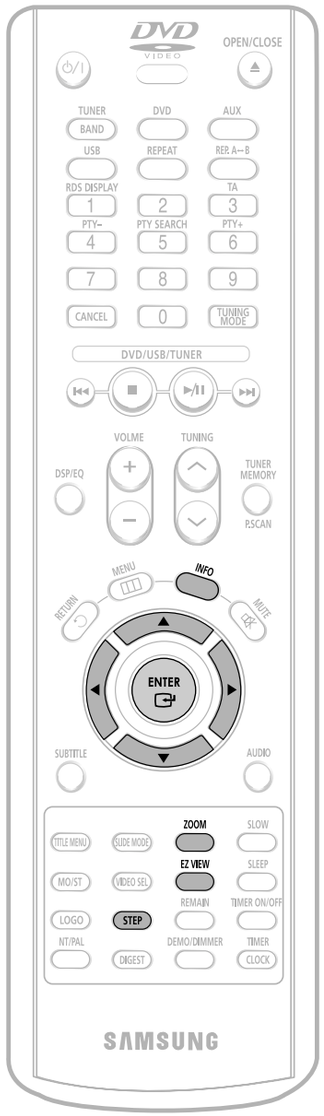

Zoom (Screen Enlarge) Function

This function allows you to enlarge a particular area of the displayed image.

DVD VCD

1 Press **ZOOM** button.

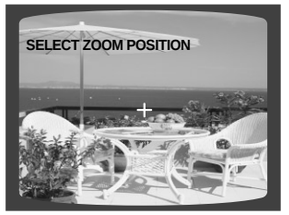

2 Press Cursor ▲, ▼, ◀, ▶ buttons to move to the area you want to enlarge.

3 Press **ENTER** button.

- Each time the button is pressed, the zoom level changes as follows:

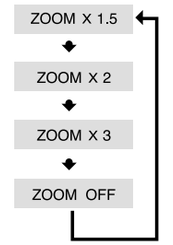

EZ VIEW Function DVD

Press **EZ VIEW** button.

- Each time the button is pressed, the zoom function will switch between On and Off.
- When a movie is played in Widescreen format, black bars at the top and bottom of the TV screen can be removed by pressing the **EZ VIEW** button.

Note

- This function will not work if the DVD is recorded with multi-camera angle format.
- Black bars may not disappear because some DVD discs have a built-in horizontal to vertical ratio.

Selecting Audio/Subtitle Language

Audio Language Selection Function

DVD

1 Press **INFO** button twice.

DVD EN 1/3 OFF/ 02 OFF

2 Press Cursor ▲, ▼ buttons or numeric buttons to select the desired audio language.

- Depending on the number of languages on a DVD disc, a different audio language (KOREAN, ENGLISH, JAPANESE, etc.) is selected each time the button is pressed.

DVD EN 1/3 OFF/ 02 OFF

◆ SP 2/3

◆ FR 3/3

Note

- You can use the AUDIO button on the remote control to select a audio language.

Subtitle Language Selection Function

DVD

1 Press **INFO** button twice.

DVD EN 1/3 OFF/ 02 OFF

2 Press Cursor ▶ button to move to SUBTITLE display.

DVD EN 1/3 OFF/ 02 OFF

3 Press Cursor ▼ button or numeric buttons to select the desired subtitle.

DVD EN 1/3 EN 01/ 03 OFF

◆ SP 02/ 03

◆ FR 03/ 03

◆ OFF / 03

Note

- You can use the SUBTITLE button on the remote control to select a subtitle language.
- Depending on the disc, the Subtitle and Audio Language functions may not work.

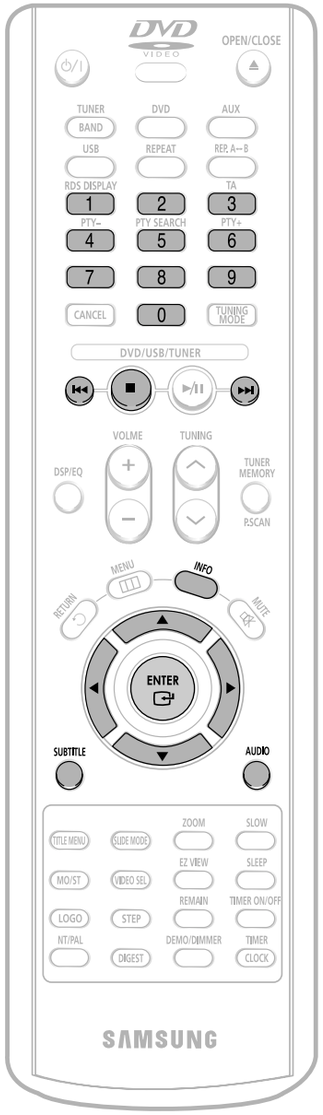

Moving Directly to a Scene/Song

DVD VCD CD

1 Press **INFO** button.

DVD 01/05 001/040 0:00:37 1/1

Moving to a Title/Track

2 Press Cursor ▲, ▼ buttons or numeric buttons to select the desired title/track and then press **ENTER** button.

DVD 03/05 001/002 0:00:01 1/1

Moving to a Chapter

3 Press Cursor ◀, ▶ buttons to move to Chapter display.

DVD 01/05 001/040 0:00:01 1/1

Moving to a Chapter

4 Press Cursor ▲, ▼ buttons or numeric buttons to select the desired chapter and then press **ENTER** button.

DVD 01/05 025/040 0:00:01 1/1

Moving to a Specific Time

5 Press Cursor ◀, ▶ buttons to move to time display.

DVD 01/05 025/040 1:17:30 1/1

Moving to a Specific Time

6 Press the numeric buttons to select the desired time and then press **ENTER** button.

DVD 01/05 028/040 1:30:00 1/1

MP3 JPEG

Press the **numeric** buttons.

- The selected file will be played.
- An MP3 or JPEG disc cannot be moved from the disc information screen.
- When playing an MP3 or JPEG disc, you cannot use ▲, ▼ to move a folder. To move a folder, press ■ (Stop) and then press ▲, ▼ .

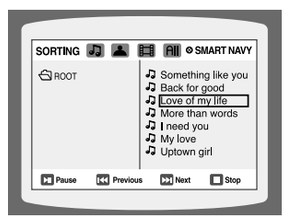

Note

- You can press ⏮ ⏭ on the remote control to move directly to the desired title, chapter, or track.
- Depending on the disc, you may not be able to move to the selected title or time.

Using Disc Menu

You can use the menus for the audio language, subtitle language, profile, etc.
DVD menu contents differ from disc to disc.

DVD

1 Press **MENU** button in the stop mode.

- When playing a VCD (version 2.), this toggles between PBC ON and OFF.

2 Press Cursor ▲,▼ buttons to move to 'DISC MENU' and then press **ENTER** button.

- When you select the disc menu that is not supported by the disc, the "**This menu is not supported**" message appears on the screen.

3 Press Cursor ▲,▼, ◄,► buttons to select the desired item.

4 Press **ENTER** button.

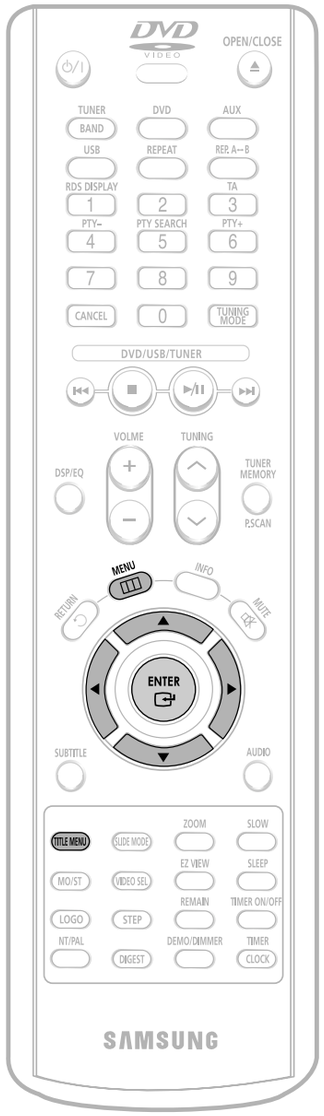

Note

- Disc menu display may be different depending on the disc.

PBC (Playback Control) Function

When playing a VCD (version 2.0), you can select and view various scenes according to the menu screen.

PBC ON: This VCD disc is version 2.0. The disc is played back according to the menu screen.
Some functions may be disabled. When some functions are disabled, select "PBC OFF" to enable them.

PBC OFF: This VCD disc is version 1.1. The disc is played back in the same way as with a music CD.

Using the Title Menu

For DVDs containing multiple titles, you can view the title of each movie.

DVD

1 Press **MENU** button in the stop mode.

2 Press Cursor ▲,▼ button to move to 'Title Menu'.

3 Press **ENTER** button.

- The title menu appears.

Press **MENU** button to exit the setup screen.

Note

- You can also used the **TITLE MENU** button on the remote control to select a Title Menu.
- Title menu display may be different depending on the disc.

Setting the Language

OSD (On-Screen Display) language is set to English by default.

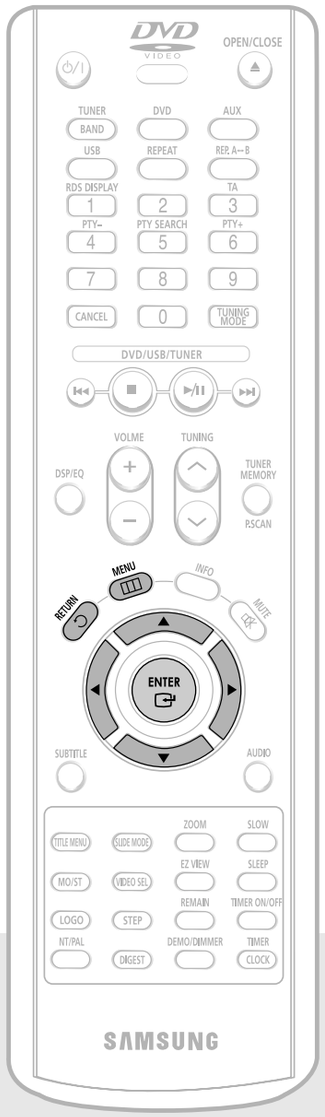

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

3 Select '**Language**' and then press **ENTER** button

4 Press Cursor ▲,▼ button to select '**OSD Language**' and then press **ENTER** button.

5 Press Cursor ▲,▼ button to select the desired language and then press **ENTER** button.

- Once the setup is complete, if the language was set to English, OSD will be displayed in English.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Note

- To select another language, select OTHER and enter the language code of your country. (See page 60 for language codes)
  AUDIO, SUB TITLE and DISC MENU language can be selected.

Selecting the OSD Language

Selecting the Audio Language (recorded on the disc)

Selecting the Subtitle Language (recorded on the disc)

Selecting the Disc Menu Language (recorded on the disc)

* If the language you selected is not recorded on the disc, menu language will not change even if you set it to your desired language.

Setting TV Screen type

Depending on your TV type (Wide Screen or conventional 4:3), you can select the TV's aspect ratio.

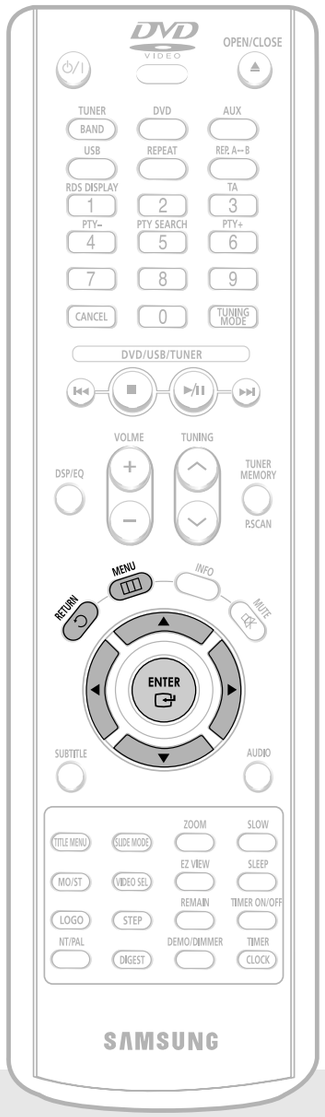

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

3 Press Cursor ▼ button to move to 'TV DISPLAY' and then press **ENTER** button.

4 Press Cursor ▲,▼ button to select the desired item and then press **ENTER** button.

- Once the setup is complete, you will be taken to the previous screen.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Adjusting the TV Aspect Ratio (Screen Size)

The horizontal to vertical screen size ratio of conventional TVs is 4:3, while that of widescreen and high definition TVs is 16:9. This ratio is called the aspect ratio. When playing DVDs recorded in different screen sizes, you should adjust the aspect ratio to fit your TV or monitor.

- **For a standard TV, select either "4:3LB" or "4:3PS" option according to personal preference. Select "16:9" if you have a widescreen TV.**

WIDE : Select this to view a 16:9 picture in the full-screen mode on your widescreen TV.
- You can enjoy the widescreen aspect.

4:3LB (4:3 Letterbox) : Select this to play a 16:9 picture in the letter box mode on a conventional TV.
- Black bars will appear at the top and bottom of the screen.

4:3PS (4:3 Pan&Scan) : Select this to play a 16:9 picture in the pan & scan mode on a conventional TV.
- You can see the central portion of the screen only (with the sides of the 16:9 picture cut off).

Note
- If a DVD is in the 4:3 ratio, you cannot view it in widescreen.
- Since DVD discs are recorded in various image formats, they will look different depending on the software, the type of TV, and the TV aspect ratio setting.

Setting Parental Controls (Rating Level)

Use this to restrict playback of adult or violent DVDs you do not want children to view.

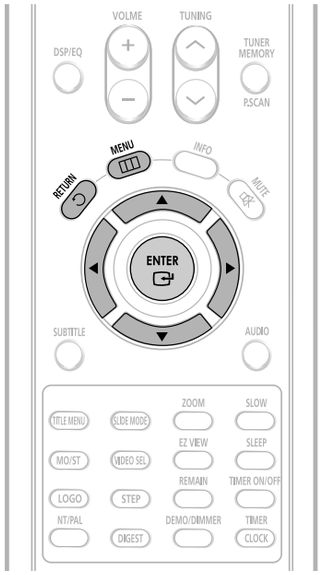

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

3 Press Cursor ▼ button to move to 'PARENTAL' and then press **ENTER** button.

4 Press Cursor ▲,▼ button to select the desired rating level and then press **ENTER** button.

- If you have selected Level 6, you cannot view DVDs with Level 7 or higher.
- The higher the level, the closer the content is to violent or adult material.

5 Enter the password and then press **ENTER** button.

- The password is set to "7890" by default.
- Once the setup is complete, you will be taken to the previous screen.

Note • This function works only if a DVD disc contains the rating level information.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Setting the Password

You can set the password for the Parental (rating level) setting.

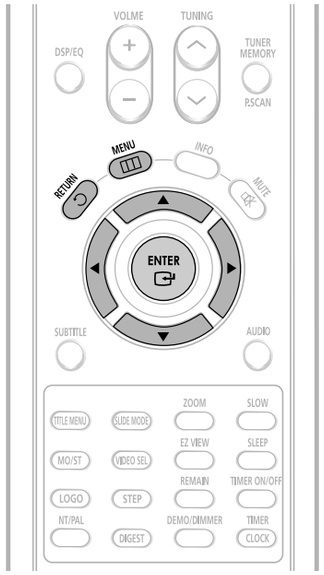

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

3 Press Cursor ▼ button to move to 'PASSWORD' and then press **ENTER** button.

4 Press **ENTER** button.

5 Enter the password and then press **ENTER** button.

- Enter the old password, a new password, and confirm new password.
- The setting is complete.

Note • The password is set to "7890" by default.

If you have forgotten the rating level password, do the following:

- While the player is in the no disc mode, hold the main unit's ◯ button for longer than 5 seconds. "INITIALIZE" appears on the display and all settings will return to the default values.
- Press the POWER button.

Using the RESET function will erase all stored settings.
Do not use this unless necessary.

Setting the Wallpaper

JPEG DVD VCD

While watching a DVD, VCD or JPEG CD, you can set the image you like as background wallpaper.

Setting the Wallpaper

1 During playback, press **PLAY/PAUSE** button when the image you like comes up.

2 Press **LOGO** button.

- "**LOGO COPY DATA**" will be displayed on the TV screen.

3 The power will turn off and then back on.

- The selected wallpaper will be displayed.

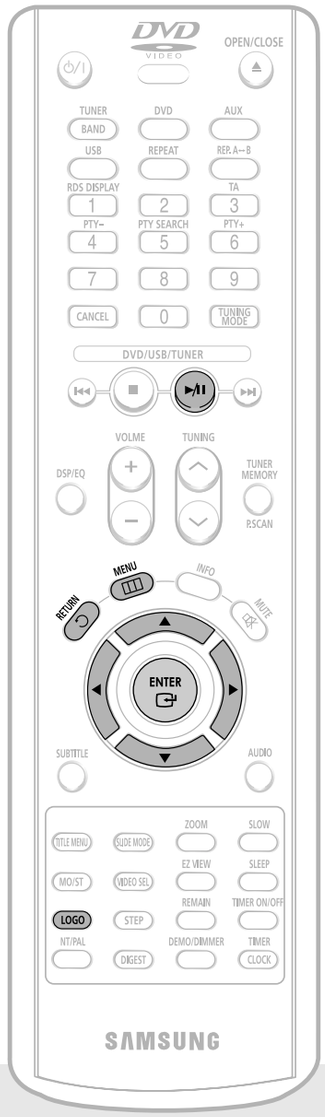

To select one of the 3 wallpaper settings you've made

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Setup' and then press **ENTER** button.

3 Press Cursor ▼ button to move to 'LOGO' and then press **ENTER** button.

4 Press ▼ to select the desired 'USER', and then press **ENTER**.

5 Press **MENU** button to exit the setup screen.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Select this to set the Samsung Logo image as your wallpaper.

Select this to set the desired image as your wallpaper.

DivX (R) registration

- Please use the Registration code to register this player with the DivX (R) video on demand format. To learn more, go to www.divx.com/vod.

Setting the DRC (Dynamic Range Compression)

You can use this function to enjoy Dolby Digital sound when watching movies at low volume at night.

1 Press **MENU** button in the stop mode.

2 Press Cursor ▼ button to move to 'Audio' and then press **ENTER** button.

3 If "**DRC**" is selected, press **ENTER**.

4 Press Cursor ▲,▼ to adjust the 'DRC'.

- The Cursor ▲ button is pressed, the greater the effect, and the Cursor ▼ button is pressed, the smaller the effect.

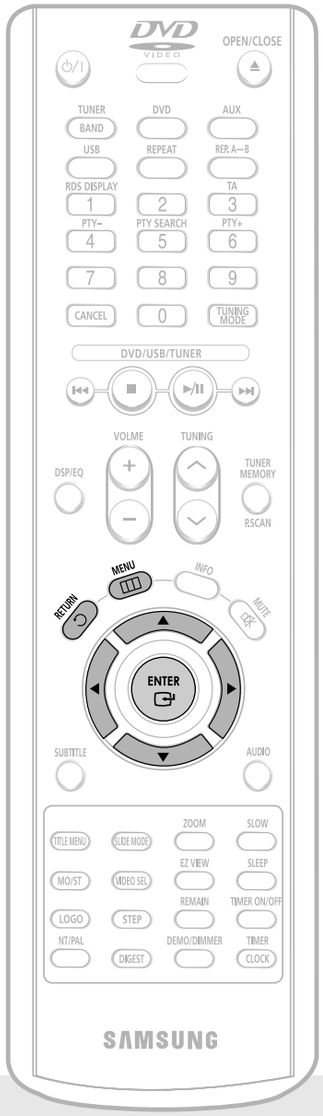

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

AV SYNC Setup

Video may look slower than the audio if it is connected to a digital TV.
If this occurs, adjust the audio delay time to to match the video.

1 Press the **MENU** button.

- Setup menu appears.

2 Press Cursor ▲, ▼ buttons to move to 'Audio' and then press **ENTER** button.

- 'Audio' menu appears.

3 Press Cursor ▲, ▼ buttons to move to 'AV-SYNC' and then press **ENTER** button.

- AV-SYNC screen appears.

4 Press Cursor ▲,▼ buttons to select the Delay Time of AV-SYNC and then press the **ENTER** button.

- You can set the audio delay time between 0 ms and 300 ms. Set it for the best sync up with audio.

Press **RETURN** button to return to the previous level.

Press **MENU** button to exit the setup screen.

Sound Field (DSP)/EQ Function

DSP(Digital Signal Processor) DSP modes have been designed to simulate different acoustic environments.
EQ: You can select ROCK, POP, or CLASSIC to optimize the sound for the genre of music you are playing

Press **DSP/EQ** button.

- "DSP" appears on the display panel.
- Each time the button is pressed, the selection changes as follows:

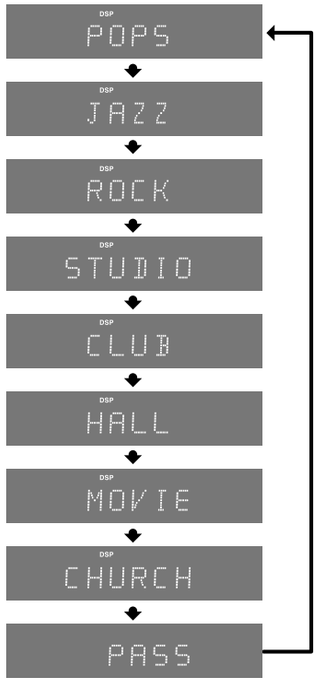

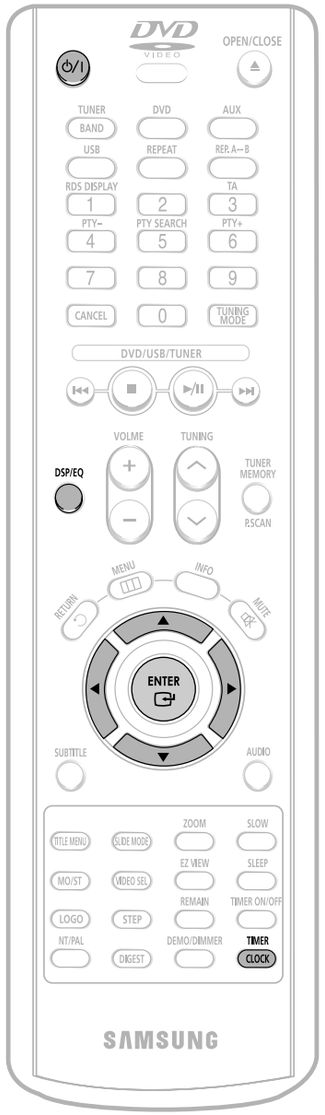

Note

- DSP/EQ function is only available in STEREO mode.
- This feature works with CDs, MP3-CDs, 2 channel DVD-Audio, DivX and Dolby Digital discs.
- When playing a DVD disc encoded with two or more channels, multi-channel mode will be selected automatically and DSP/EQ function does not work.

POPS, JAZZ, ROCK: Depending on the genre of music, you can select POP, JAZZ, and ROCK.
STUDIO : Provides a sense of presence as if in a studio.
CLUB : Simulates the sound of a dance club with a throbbing bass beat.
HALL : Provides a clear vocal as if listening in a concert hall.
MOVIE: Provides the feeling of a movie theater.
CHURCH: Gives the feel of being in a grand church.
PASS: Select this for normal listening.

Setting the Clock

For each step, you have a few seconds to set the required options.
If you exceed this time, you must start again.

1 Switch the system on by pressing **POWER** button.

2 Press **TIMER/CLOCK** twice.

- **CLOCK** is displayed.

3 Press **ENTER**. The hour flashes.

- Increase the hours : ▶
- Decrease the hours : ◀

4 When the correct hour is displayed, press **ENTER**. The minutes flash.

- Increase the minutes : ▶
- Decrease the minutes : ◀

5 When the correct time is displayed, press **ENTER**.

- "**TIMER**" appears in the display.
- The current time is now set.

Note

- You can display the time, even when you are using another function, by pressing **TIMER/CLOCK** once.

Timer Function

The timer enables you to switch the system on or off at specific times.

Example: You wish to wake up to music every morning.

1 Switch the system on by pressing **POWER**.

2 Press **TIMER/ CLOCK** until **TIMER** is displayed.

3 Press the **ENTER** button.

- **ON TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-on time already set; you can set the timer switch-on time.

4 Set the timer switch-on time.

a. Set the hour by pressing ◀ or ▶ button.
b. Press **ENTER**.
- The minutes flash.

c. Set the minutes by pressing ◀ or ▶ button.
d. Press **ENTER**.
- **OFF TIME** is displayed (instead of the equalizer symbols) for a few seconds, followed by any switch-off time already set; you can now set the timer switch-off time.

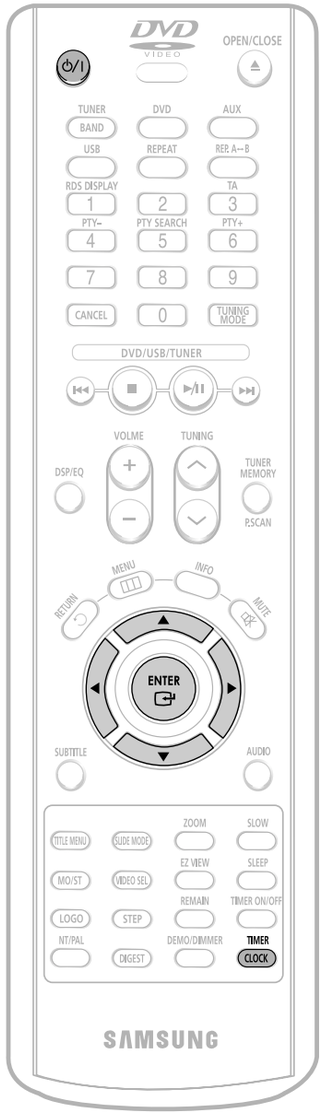

5 Set the timer switch-off time.

a. Set the hour by pressing ◀ or ▶ button.
b. Press **ENTER**.
- The minutes flash.

c. Set the minutes by pressing ◀ or ▶ button.
d. Press **ENTER**.
- **VOL 20** is displayed, where 10 corresponds to the volume already set.

6 Press ◀ or ▶ button to adjust the volume level and press **ENTER**.

- The source to be selected is displayed.

7 Press ◀ or ▶ button to select the source to be played when the system switches on.

- USB : Connect a USB cable.
- TUNER (FM, AM) :
  a Press **ENTER**.
  b Select a preset station by pressing Tuning ◀ or ▶ .
- DVD/CD : Load a compact disc.

8 Press **ENTER** to confirm the timer.

9 Press **POWER** to set the system to standby mode.

- ◷ is displayed to the top-right of the time, indicating that the timer has been set.
- The system will switch on and off automatically at the required times.

Note

- If the timer switch on and off times are identical, the word **ERROR** is displayed.
- If you no longer want the system to be switched on or off automatically, you must cancel the timer.
- Before setting the timer, check that the current time is correct.
- For each step, you have a few seconds to set the required options. If you exceed this time, you must start again.
- In standby mode, you can press **MULTI JOG(PUSH ENTER)** button instead of **ENTER** button and press ⏮ ⏭ buttons or turn **MULTI JOG(PUSH ENTER)** knob on the front panel instead of ◀, ▶ buttons on the remote control in step 4,5,6,7.

Listening to Radio

You can listen to the chosen band (FM, AM broadcast stations) by using either the automatic or manual tuning operation.

Remote Control Unit

1 Press **TUNER/ BAND** button.

- The selection toggles back and forth between "FM → AM" each time the **TUNER(BAND)** button is pressed.

2 **Tune in to the desired station.**

Automatic Tuning 1 Press ⏮ ⏭ button to select the preset station.

Automatic Tuning 2 Press and hold **TUNING** button to automatically search the band.

Manual Tuning Briefly press **TUNING** button to increase or decrease the frequency incrementally.

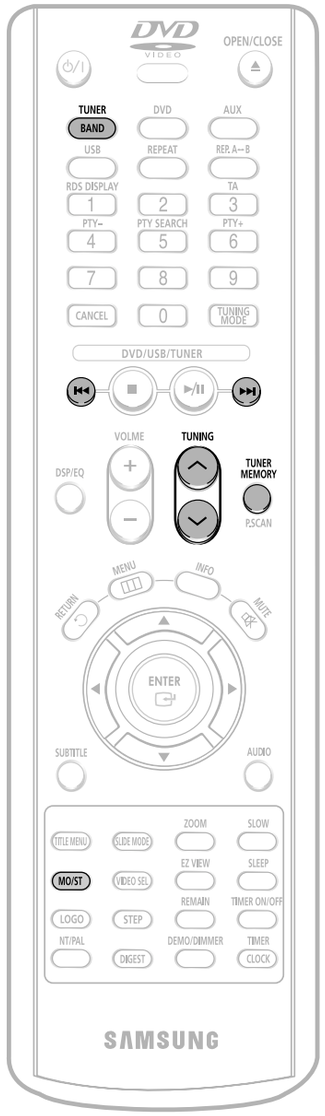

Main Unit

1 Press the **TUNER** button to select the desired band (FM, AM).

2 Select a broadcast station.

Automatic Tuning Press the **STOP** (■) button to select PRESET and then press and hold ⏮ ⏭ button to select the preset station.

Manual Tuning Press **STOP** (■) to select MANUAL and then briefly press ⏮ ⏭ to tune in to a lower or higher frequency.

Presetting Stations

You can store up to:

- ♦ 15 FM stations
- ♦ 15 AM stations

- **FM** ····· Frequency Modulation
- **AM** ····· Medium Wave

Example: Presetting FM 89.1 in the memory

1 Press the **TUNER/ BAND** button and select the FM band.

- Each time the button is pressed, the band switches between "FM → AM".

2 Press **TUNING** to select "89.10".

- Refer to Step 2 on page 49 to automatically or manually tune in to a station.

3 Press the **TUNER MEMORY** button.

- "**PROGRAM**" flashes in the display.

4 Press ⏮ ⏭ to select preset number.

- You can select between 1 and 15.

5 Press the **TUNER MEMORY** button again.

- Press the **MEMORY** button before '**PROGRAM**' disappears from the display.
- '**PROGRAM**' disappears from the display and the station is stored in memory.

6 To preset another station, repeat steps 2 to 5.

Press **MO/ST** button to listen in Mono/Stereo.
(This applies only when listening to an FM station.)

- Each time the button is pressed, the sound switches between "STEREO" and "MONO".
- In a poor reception area, select MONO for a clear, interference-free broadcast.

To tune in to a preset station, press ⏮ ⏭ on the remote control to select a channel.

About RDS broadcasting

Using the RDS (Radio Data System) to receive FM stations

RDS allows FM stations to send an additional signal along with their regular program signals. For example,the stations send their station names,as well as information about what type of program they broadcast, such as sports or music,etc.

When tuned to an FM station which provides the RDS service,the RDS indicator lights up on the display.

- **Description on RDS function**

1. **PTY (Program Type) :** Displays the type of programme currently being broadcast
2. **PS NAME (Program Service Name) :** Indicates the name of broadcasting station and is composed of 8 characters.
3. **RT (Radio Text) :** Decodes the text broadcast by a station (if any) and is composed of maximum 64 characters.
4. **CT (Clock Time) :** Decodes the real time clock from the FM frequency.
   - Some stations may not transmit PTY, RT or CT information therefore this may not be displayed in all cases.
5. **TA (Traffic Announcement) :** When this symbol flashes it shows that the traffic announcement is in progress.

Note

- RDS may not operate correctly if the station tuned is not transmitting RDS signal properly or if the signal strength is weak.

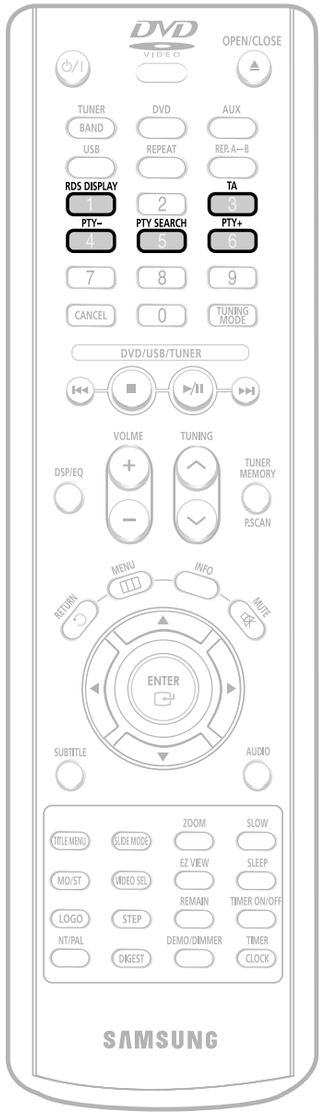

What information can RDS signals provide?

You can see the RDS signals the station sends on the display.

TO show the RDS signals

Press RDS DISPLAY while listening to an FM station.
Each time you press the button, the display change to show you the following information:

→ PS NAME → RT → CT → Frequency →

PS (Program Service) : While searching,"**PS**"appears and then the station names will be displayed."**NO PS**" appears if no signal is sent.
RT(RadioText) : while searching,"**RT**"appears and then text messages the station sends will be displayed. "**NO RT**"appears if no signal is sent.
Frequency : station frequency (non-RDS service)

About characters shown in the display

When the display shows PS,or RT signals,the following characters are used.

- The display window cannot differentiate upper case and lower case lrtters and always uses upper case letters.
- The display window cannot show accented letters, "**A**," for instance, may stans for accented "**A's**" like "**À, Â, Ã, Á, Åand Ã**."

Note

- If searching finishes at once,"**PS**",and "**RT**" will not appear on the display.

PTY (Program Type) indication and PTY-SEARCH function

One of the advantages of the RDS service is that you can locate a particular kind of program from the preset channels by specifying the PTY codes.

To search for a program using the PTY codes

Before you start, remember...

- The PTY Search is only applicable to preset stations.
- To stop searching any time during the process, press PTY SEARCH while searching.
- There is a time limit in doing the following steps. If the setting is cancelled before you finish, start from step 1 again.
- When pressing the buttons on the primary remote control, make sure that you have selected the FM station using the primary remote control.

1 Press PTY SEARCH while listenning to an FM station.

2 Press the PTY-or PTY+until the PTY code you want appears on the display.
- The display gives you the PTY codes described to the right.

3 Press PTY SEARCH again, while the PTY code selected in the previous step is still on the display.
- The center unit searches 15 preset FM stations,stops when it finds the one you have selected, and tunes in that station.

Display	Program Type
NEWS	• News including an announced opinion and report
AFFAIRS	• Several matters including a current incident, documentary, discussion and analysis.
INFO	• Information including weights and measures, returns and forecast, matters interesting the customer, medical information, etc.
SPORT	• Sports
EDUCATE	• Education
DRAMA	• Drama-Radio serial, etc.
CULTURE	• Culture-National or local culture including the religious problem, social science, language, theater,etc.
SCIENCE	• Natural science and technology
VARIED	• Others-Speech, amusing program (quiz, game), interview, comedy and satirical play, etc.
POP M	• Pop music
ROCK M	• Rock music
M.O.R.M	• Current contemporary music considered to be "easylistening."
LIGHT M	• Light classical music- Classical music and instrumental and chorus music
CLASSICS	• Heavy classical music-Orchestra music, symphony, chamber music and opera
OTHER M	• Other music - Jazz, R&B country music
WEATHER	• Weather
FINANCE	• Finance
CHILDREN	• Children's programmes
SOCIAL	• Social affairs
RELIGION	• Religion
PHONE IN	• Phone in
TRAVEL	• Travel
LEISURE	• Leisure
JAZZ	• Jazz Music
COUNTRY	• Country Music
NATION M	• National Music
OLDIES	• Oldies Music
FOLK M	• Folk Music
DOCUMENT	• Documentary

Canceling the Timer

After having set the timer, it will start automatically as shown by the TIMER indication on the display.
If you no longer wish to use the timer, you must cancel it.

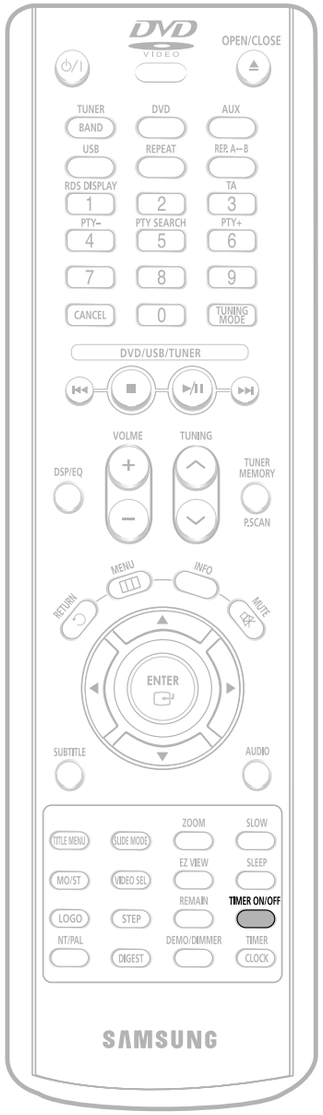

To cancel the timer, press **TIMER ON/OFF** once.

- ◷ is no longer displayed.

To resume the timer, press **TIMER ON/OFF** again.

- ◷ is displayed again.

Note

- You can cancel the timer while the power is on or while the player is in standby.

Convenient Functions

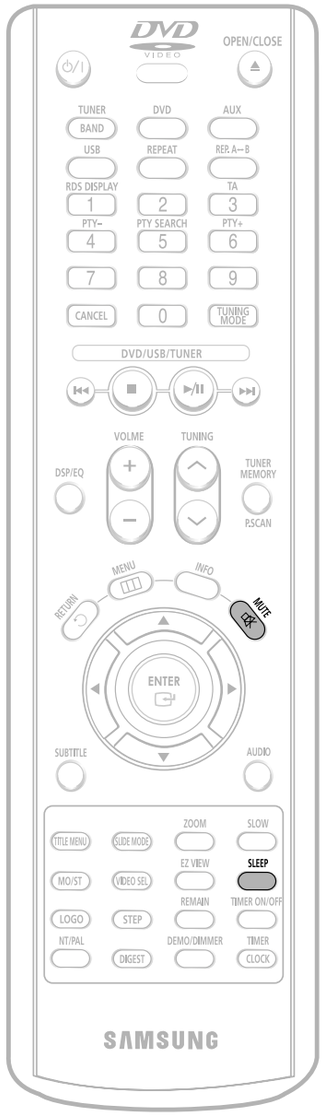

Sleep Timer Function

You can set the time that the DVD player will shut itself off.

Press **SLEEP** button.

- Each time the button is pressed, the selection changes as follows: **SLEEP 10 → SLEEP 20 → SLEEP 30 → SLEEP 60 → SLEEP 90 → SLEEP 120 → SLEEP 150 → OFF**.

To confirm the sleep timer setting, press **SLEEP** button.

- The remaining time before the DVD player will shut itself off is displayed.
- Pressing the button again changes the sleep time from what you have set earlier.

To cancel the sleep timer, press **SLEEP** button until OFF appears on the display.

Mute Function

This is useful when answering a doorbell or telephone call.

Press **MUTE** button.

- '**MUTE**' appears in the display.
- To turn off mute, press the button again.

Connecting Headphones

You can connect a set of headphones to your micro component system so that you can listen to music or radio programmers without disturbing other people in the room.
The earphones must have a 3.5ø jack or an appropriate adapter.

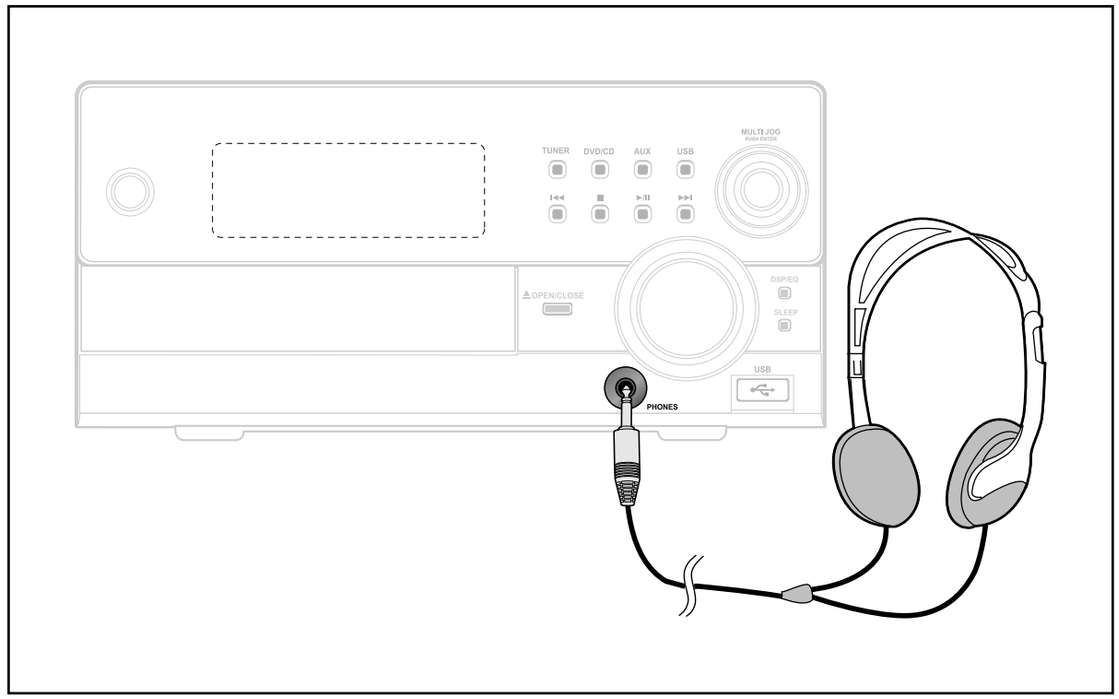

Connect the headphones to the **PHONES** jack on the front panel.

- The loudspeakers are no longer used to output the sound.

Note

- Prolonged use of headphones at a high volume may damage your hearing.

Cautions on Handling and Storing Discs

Small scratches on the disc may reduce sound and picture quality or cause skipping.
Be especially careful not to scratch discs when handling them.

Handling discs

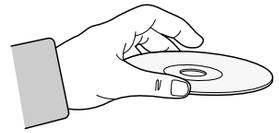

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.
Do not stick paper or tape on the disc.

Disc Storage

Do not keep in direct sunlight

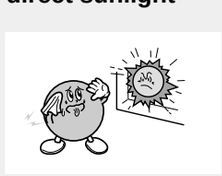

Keep in a cool ventilated area

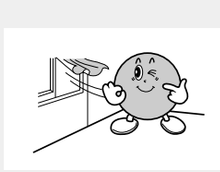

Keep in a clean Protection jacket. Store vertically.

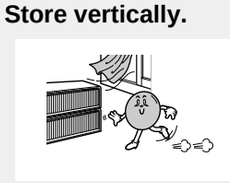

Caution

- Do not allow the discs to become contaminated with dirt.
- Do not load cracked or scratched discs.

Handling and Storing Discs

When you get fingerprints or dirt on the disc, clean it with a mild detergent diluted in water and wipe with a soft cloth.

- When cleaning, wipe gently from the inside to the outside of the disc.

Note

- Condensation may form if warm air comes into contact with cold parts inside the player. When condensation forms inside the player, the player may not operate correctly. If this occurs, remove the disc and let the player stand for 1 or 2 hours with the power on.

Before Calling for Service

Refer to the chart below when this unit does not function properly. If the problem you are experiencing is not listed below or if the instruction below does not help, turn off the unit, disconnect the power cord, and contact the nearest authorized dealer or Samsung Electronics Service Center.

Symptom	Check/Remedy
Disc tray does not open.	• Is the power cord plugged securely into the outlet? • Turn off the power and then turn it back on.
Playback does not start.	• Check the region number of the DVD. DVD discs purchased from abroad may not be playable. • CD-ROMs and DVD-ROMs cannot be played on this DVD player. • Make sure that the rating level is correct.
The remote control does not work.	• Is the remote control being operated within its operation range of angle and distance? • Are the batteries exhausted?
Playback does not start immediately when the Play/Pause button is pressed.	• Are you using a deformed disc or a disc with scratches on the surface? • Wipe the disc clean.
Sound is not produced.	• No sound is heard during fast playback, slow playback, and step motion playback. • Are the speakers connected properly? Is the speaker setup correctly customized? • Is the disc severely damaged?
Picture does not appear, sound is not produced, or the disc tray opens 2 to 5 seconds later.	• Was the DVD player suddenly moved from a cold place to a warm one? When condensation forms inside the player, remove the disc and let the player stand for 1 or 2 hours with the power on. (You can use the player again after condensation disappears.)
• Disc is rotating but no picture is produced. **• Picture quality is poor and picture is shaking.**	• Is the TV power on? • Are the video cables connected properly? • Is the disc dirty or damaged? • A poorly manufactured disc may not be playable.

Symptom	Check/Remedy
Audio language and subtitles do not work.	• Audio language and subtitles will not work for DVDs not containing them. And depending on the disc, they may work differently.
Menu screen does not appear even when the menu function is selected.	• Are you using a disc that does not contain menus?
Aspect ratio cannot be changed.	• You can play 16:9 DVDs in 16:9 WIDE mode, 4:3 LETTER BOX mode, or 4:3 PAN SCAN mode, but 4:3 DVDs can be seen in 4:3 ratio only. Refer to the DVD disc jacket and then select the appropriate function.
The tape does not start playing	• The TAPE function has not been selected. • The cassette has not been inserted correctly. • The cassette player has not been closed. • The tape is either slack or broken.
The volume falls off **The cassette is not erased correctly** **There is excessive wow and flutter**	• The audio heads are dirty. • The rollers or drive capstans are dirty. • The tape is worn.
Can't receive radio broadcast.	• Is the antenna connected properly? • If the antenna's input signal is weak, install an external FM antenna in an area with good reception.
• The main unit is not working. (Example: The power goes out or strange noise is heard.) **• The DVD player is not working normally.**	• Turn off the power and hold the **STOP(■)** button on the main unit for longer than 5 seconds. Using the RESET function will erase all stored settings. Do not use this unless necessary.
The password for rating level has been forgotten.	• While “NO DISC” message appears on the display of main unit, hold the main unit's ■ button for longer than 5 seconds. “INTIALIZE” appears on the display and all settings will return to the default values. • Press the POWER button. **Using the RESET function will erase all stored settings.** **Do not use this unless necessary.**

Notes on Discs

Disc Recording Format

CD-R Discs

- Depending on the disc recording device (CD-Recorder or PC) and the condition of the disc, some CD-R discs may not be playable.
- Use a 650MB/74 minute CD-R. Other CD-R media, as they may not be playable.
- If possible, do not use CD-RW (Rewritable) media, as they may not be playable.
- Only the CD-Rs that are properly "closed" can be fully played. If the session is closed but the disc is left open, you may not be able to fully play the disc.

CD-R MP3 Discs

- Only CD-R discs with MP3 files in ISO 9660 or Joliet format can be played.
- MP3 file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- If the name of a file is in Korean, the name will be displayed on the TV screen in Korean and * will be shown in the display of the main unit.
- Use discs recorded with a compression/decompression data rate greater than 128Kbps.
- Only files with the ".mp3" and ".MP3" extensions can be played.
- Only a consecutively written Multisession disc can be played. If there is a blank segment in the Multisession disc, the disc can be played only up to the blank segment.
- If the disc is not closed, it will take longer to begin playback and not all of the recorded files may be played.
- For files encoded in Variable Bit Rate (VBR) format, i.e. files encoded in both low bit rate and high bit rate (e.g., 32Kbps ~ 320Kbps), the sound may skip during playback.
- If more than 500 tracks are recorded on a single CD, a maximum of 500 tracks can be played.
- If more than 300 folders are recorded on a single CD, a maximum of 300 folders can be played.

What is MP3?
MP3 is short for MPEG-1 Audio Layer 3 and MPEG is an acronym for Moving Pictures Experts Group. MP3 is a file format with compression ratio of 1:12 (128 Kbps*) That is, you can use MP3 format to record about 12 times the usual amount of data on a regular CD.

CD-R JPEG Discs

- Only files with the ".jpeg" and ".JPEG" extensions can be played.
- If the disc is not closed, it will take longer to start playing and not all of the recorded files may be played.
- Only CD-R discs with JPEG files in ISO 9660 or Joliet format can be played.
- JPEG file names should be 8 characters or less in length and contain no blank spaces or special characters (. / = +).
- Only a consecutively written multisession disc can be played. If there is a blank segment in the multisession disc, the disc can be played only up to the blank segment.
- A maximum of 9,999 images can be stored on a single CD.
- When playing a Kodak/Fuji Picture CD, only the JPEG files in the picture folder can be played.
- Picture discs other than Kodak/Fuji Picture CDs may take longer to start playing or may not play at all.

Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 35).

Code	Language	Code	Language	Code	Language	Code	Language
1027	Afar	1181	Frisian	1334	Latvian, Lettish	1506	Slovenian
1028	Abkhazian	1183	Irish	1345	Malagasy	1507	Samoan
1032	Afrikaans	1186	Scots Gaelic	1347	Maori	1508	Shona
1039	Amharic	1194	Galician	1349	Macedonian	1509	Somali
1044	Arabic	1196	Guarani	1350	Malayalam	1511	Albanian
1045	Assamese	1203	Gujarati	1352	Mongolian	1512	Serbian
1051	Aymara	1209	Hausa	1353	Moldavian	1513	Siswati
1052	Azerbaijani	1217	Hindi	1356	Marathi	1514	Sesotho
1053	Bashkir	1226	Croatian	1357	Malay	1515	Sundanese
1057	Byelorussian	1229	Hungarian	1358	Maltese	1516	Swedish
1059	Bulgarian	1233	Armenian	1363	Burmese	1517	Swahili
1060	Bihari	1235	Interlingua	1365	Nauru	1521	Tamil
1069	Bislama	1239	Interlingue	1369	Nepali	1525	Tegulu
1066	Bengali; Bangla	1245	Inupiak	1376	Dutch	1527	Tajik
1067	Tibetan	1248	Indonesian	1379	Norwegian	1528	Thai
1070	Breton	1253	Icelandic	1393	Occitan	1529	Tigrinya
1079	Catalan	1254	Italian	1403	(Afan) Oromo	1531	Turkmen
1093	Corsican	1257	Hebrew	1408	Oriya	1532	Tagalog
1097	Czech	1261	Japanese	1417	Punjabi	1534	Setswana
1103	Welsh	1269	Yiddish	1428	Polish	1535	Tonga
1105	Danish	1283	Javanese	1435	Pashto, Pushto	1538	Turkish
1109	German	1287	Georgian	1436	Portuguese	1539	Tsonga
1130	Bhutani	1297	Kazakh	1463	Quechua	1540	Tatar
1142	Greek	1298	Greenlandic	1481	Rhaeto-Romance	1543	Twi
1144	English	1299	Cambodian	1482	Kirundi	1557	Ukrainian
1145	Esperanto	1300	Kannada	1483	Romanian	1564	Urdu
1149	Spanish	1301	Korean	1489	Russian	1572	Uzbek
1150	Estonian	1305	Kashmiri	1491	Kinyarwanda	1581	Vietnamese
1151	Basque	1307	Kurdish	1495	Sanskrit	1587	Volapuk
1157	Persian	1311	Kirghiz	1498	Sindhi	1613	Wolof
1165	Finnish	1313	Latin	1501	Sangro	1632	Xhosa
1166	Fiji	1326	Lingala	1502	Serbo-Croatian	1665	Yoruba
1171	Faeroese	1327	Laothian	1503	Singhalese	1684	Chinese
1174	French	1332	Lithuanian	1505	Slovak	1697	Zulu

USB Host Feature Supported Family

Digital Camera

Product	Company	Type
Finepix-A340	Fuji	Digital Camera
Finepix-F810	Fuji	Digital Camera
Finepix-F610	Fuji	Digital Camera
Finepix-f450	Fuji	Digital Camera
Finepix S7000	Fuji	Digital Camera
Finepix A310	Fuji	Digital Camera
KD-310Z	Konica	Digital Camera
Finecam SL300R	Kyocera	Digital Camera
Finecam SL400R	Kyocera	Digital Camera
Finecam S5R	Kyocera	Digital Camera
Finecam Xt	Kyocera	Digital Camera
Dimage-Z1	Minolta	Digital Camera
Dimage Z1	Minolta	Digital Camera
Dimage X21	Minolta	Digital Camera
Coolpix4200	NIKON	Digital Camera
Coolpix4300	NIKON	Digital Camera
Coolpix 2200	Nikon	Digital Camera
Coolpix 3500	Nikon	Digital Camera
Coolpix 3700	Nikon	Digital Camera
Coolpix 4100	Nikon	Digital Camera
Coolpix 5200	Nikon	Digital Camera
stylus 410 digital	Olympus	Digital Camera
300-digital	Olympus	Digital Camera
u300	Olympus	Digital Camera
X-350	Olympus	Digital Camera
C-760	Olympus	Digital Camera
C-5060	Olympus	Digital Camera
X1	Olympus	Digital Camera
u-mini	Olympus	Digital Camera
Lumix-FZ20	Panasonic	Digital Camera
DMC-FX7GD	Panasonic	Digital Camera
Lumix LC33	Panasonic	Digital Camera
LUMIX DMC-F1	Panasonic	Digital Camera
Optio-S40	Pentax	Digital Camera
Optio-S50	Pentax	Digital Camera
Optio 33LF	Pentax	Digital Camera
Optio MX	Pentax	Digital Camera
Digimax-420	Samsung	Digital Camera
Digimax-400	Samsung	Digital Camera
Kenox UX4	Samsung	Digital Camera
VPC-AZ1	Sanyo	Digital Camera
Not recognize in PC		

Product	Company	Type
Sora PDR-T30	Toshiba	Digital Camera
Coolpix 5900	Nikon	Digital Camera
Coolpix S1	Nikon	Digital Camera
Coolpix 7600	Nikon	Digital Camera
DMC-FX7	Panasonic	Digital Camera
DMC-LS1	Panasonic	Digital Camera
DMC-LZ2	Panasonic	Digital Camera
S5i	Pentax	Digital Camera
Dimage Xt	Minolta	Digital Camera
AZ-1	Olympus	Digital Camera
DSC-W5	Sony	Digital Camera

USB Flash Disc

Product	Company	Type
Cruzer Micro	SanDisk	USB2.0 USB Flash Drive 128M
Cruzer Mini	SanDisk	USB2.0 128M
Cruzer Mini	SanDisk	USB2.0 256M
SONY Micro Vault	SONY	USB2.0 64MB
FLEX DRIVE	serotech	USB2.0 32MB
AnyDrive	A.L tech	USB2.0 128MB
XTICK	LG	USB2.0 128M
Micro Mini	IOMEGA	USB2.0 128M
iFlash	Imation	USB2.0 64M
LG	XTICK(M)	USB2.0 64M
RiDATA	EZDrive	USB2.0 64M

Multi Card Reader

Product	Company	Type
UNICORN	Unicorn	USB 2.0 7 IN 1 CARD READER UC-601R
USB2.0 Card Reader	Billionton(Taiwan)	USB 2.0 Card Reader for SD/MMC/RS-MMC(3-in-1)

MP3 Player

Product	Company	Type
Creative MuVo NX128M	Creative	128 MB MP3 Player
Iriver H320	Iriver	20G HDD MP3 player
YEPP YH-920	samusung	20G HDD MP3 player
YEPP YH-925	samusung	20G HDD MP3 player
I-pod	apple	HDD MP3 player(40G)
I-pod mini	Apple	HDD MP3 Player(20G)
YEPP(YP-T7)	samsung	MP3 Player
YEPP(YP-MT6)	samsung	MP3 Player
YEPP(YP-T6)	samsung	MP3 Player
YEPP(YP-53)	samsung	MP3 Player
YEPP(YP-st5)	samsung	MP3 Player
YEPP(YP-T5)	samsung	MP3 Player
YEPP(YP-60)	samsung	MP3 Player
YEPP(YP-780)	samsung	MP3 Player
YEPP(YP-35)	samsung	MP3 Player
YEPP(YP-55)	samsung	MP3 Player
iAUDIO U2	COWON(Korea)	MP3 Player
iAUDIO G3	COWON(Korea)	MP3 Player
iAudio M3	COWON(Korea)	HDD MP3 player
SI-M500L	SHARP(Japan)	256MB MP3Player
H10	IRIVER(Korea)	MP3Player
YEPP YP-T5 VB	Samsung(Korea)	MP3Player
YEPP YP-53	Samsung(Korea)	256MB MP3Player

USB External HDD

Product	Company	Type
CUTIE	serotech	POCKET HARD DISK DRIVE
MOMOBAY UX-2	DVICO	USB2.0

Specifications

GENERAL	Power Consumption	80W	
	Weight	4Kg	
	Dimensions (W x H x D)	270 x 125 x 333 mm	
	Operating Temperature Range	+5°C~+35°C	
	Operating Humidity Range	10%~75%	
FM TUNER	Usable Sensitivity	10dB	
	S/N Ratio	55dB	
	Distortion	0.8%	
AM TUNER	Usable Sensitivity	65dB/40dB	
	S/N Ratio	35dB	
	Distortion	2%	
VIDEO OUTPUT	Composite Video	1.0Vp-p(75Ω load)	
	Scart Jack	Compositive Video : 1.0Vp-p(75Ω load)	
		RGB signal : 0.714Vp-p(75Ω load)	
	Component Video	Y:1.0Vp-p(75Ω load)	
		Pr:0.70Vp-p(75Ω load)	
		Pb:0.70Vp-p(75Ω load)	
AMPLIFIER	Speaker output	MAIN : 2X80W, subwoofer : 100W	
	Frequency range	20Hz~20kHz	
	S/N Ratio	70dB	
	Channel separation	65dB	
	Input sensitivity	(AUX)400mV	
SPEAKER	Speaker system	**Loudspeakers**	
		MAIN	SUBWOOFER
	Impedance	4Ω x 2	3Ω
	Frequency range	20 Hz - 20 KHz (± 1 dB)	
	Output sound pressure level	84dB/W/M	86dB/W/M
	Rated input	80W	100W
	Maximum input	160W	200W
	Dimensions (W x H x D)	134(W) x 295(H) x 225(D) mm	205(W) x 275(H) x 303(D) mm
	Weights	2.46 Kg	3.94 Kg

Memo